ROCKVILLE



RHP91 RDP931 RVD951 RTSVD961

9" HEADREST DVD ENTERTAINMENT SYSTEM USER'S MANUAL



Thank you for purchasing this Rockville Headrest DVD Entertainment System.

We are very proud to bring you what we consider to be the absolute best value in mobile audio products. This project has been a culmination of years of development involving a team of dreamers, engineers, designers and marketing gurus. Proudly conceived and developed in the USA, Rockville mobile audio products are designed and engineered by a team of car audio enthusiasts.

We have spared no expense in manufacturing these Rockville Headrest DVD Entertainment System to meet the highest quality standards. With proper care and installation this unit will provide you with the highest levels of viewing quality. We hope that this unit will bring you years of performance and reliability.

Please read this installation guide carefully for proper use of your Rockville Headrest DVD Entertainment System. Should you need technical assistance during or after your installation please call our technical help line at 1-646-758-0144, Monday through Friday, 9am to 5pm EST.



Table of Contents

Specs	2-4
Front Panel Operation	5
Remote	6-7
Media Devices	8
DVD Operation	9
Touch DVD Controls	9
Browsing Files	10
Settings	11
Wiring Diagram	
Installation	
Troubleshootings	14

Powering the Unit


- Turn the engine key to the "ACC" or "ON" position
- Press and hold the power button for 3 seconds
- · The unit will turn on and the main screen will be displayed.
- When the engine key is turned to the "OFF" position, the unit will turn
 off.
- If the unit does not turn on, check to ensure all wires are connected properly. It is strongly suggested you seek out the help of a professional when installing.

	RHP91
Screen Size	9" TFT-LCD
Aspect Ratio	16:9
Resolution	800x480 pixels
DVD Player	N/A
USB Slot	N/A
HDMI Input	N/A
A/V Inputs	2.4 inputs (one on the front panel)
Video Input Level	1Vp-p, 75 ohm(composite)
Wired Headphone Input	On the front panel
IR Frequency (A Ch)	2.3 MHz/2.8 MHz
IR Frequency (B Ch)	3.2 MHz/3.8 MHz
FM Transmitter	87.7MHz, 88.1MHz, 88.5MHz, 88.9MHz, 107.1 MHz, 107.9 MHz
Post Diameter	10mm post with 12/12.5/12.7/13.8/14/16mm plastic inserts
Post Distance	Adjustable 110mm-190mm
3 Different Color Choices	Black, Beige, Gray
Power	DC 12V(9-15V)


		RDP931/ RVD951
	Screen Size	9" TFT-LCD
-	Aspect Ratio	16:9
	Resolution	800x480 pixels
	DVD Player	Fully integrated with top loading DVD player
	USB Slot	Audio, video, photo, e-book reader
	HDMI Input	Audio and video
	A/V Inputs	2.4 inputs (one on the front panel)
	Video Input Level	1Vp-p, 75 ohm(composite)
	Wired Headphone Input	On the front panel
	IR Frequency (A Ch)	2.3 MHz/2.8 MHz
	IR Frequency (B Ch)	3.2 MHz/3.8 MHz
	FM Transmitter	87.7MHz, 88.1MHz, 88.5MHz, 88.9MHz, 107.1 MHz, 107.9 MHz
_	Post Diameter	10mm post with 12/12.5/12.7/13.8/14/16mm plastic inserts
_	Post Distance	Adjustable 110mm-190mm
	3 Different Color Choices	Black, Beige, Gray
_	Power	DC 12V(9-15V)

		RTSVD961
	Touch Screen	*Touch capabilities only available on the RTSVD961 unit.
	Screen Size	9" TFT-LCD
	Aspect Ratio	16:9
	Resolution	800x480 pixels
	DVD Player	Fully integrated with top loading DVD player
	USB Slot	Audio, video, photo, e-book reader
	HDMI Input	Audio and video
	A/V Inputs	2.4 inputs (one on the front panel)
	Video Input Level	1Vp-p, 75 ohm(composite)
	Wired Headphone Input	On the front panel
	IR Frequency (A Ch)	2.3 MHz/2.8 MHz
	IR Frequency (B Ch)	3.2 MHz/3.8 MHz
	FM Transmitter	87.7MHz, 88.1MHz, 88.5MHz, 88.9MHz, 107.1 MHz, 107.9 MHz
	Post Diameter	10mm post with 12/12.5/12.7/13.8/14/16mm plastic inserts, 12mm metal inserts
	Post Distance	Adjustable 110mm-190mm
_	3 Different Color Choices	Black, Beige, Gray
	Power	DC 12V(9-15V)


Front Panel Operation

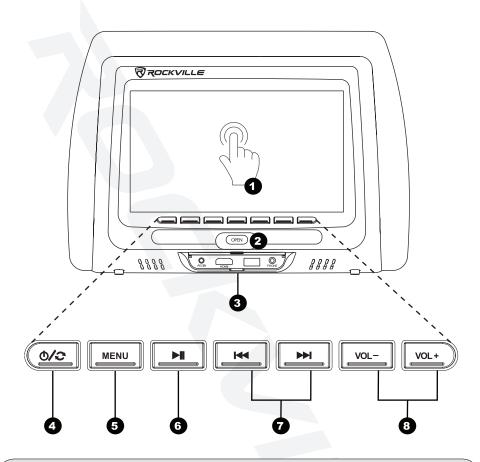

	1	Touch Screen	*Touch capabilities only available on the RTSVD961 unit (see pg.9 for more information)
	2	Open	Open the disc loading tray
	3	Media Bay	Various media inputs and outputs are available (See pg.# for more details)
	4	Power/Switch	Hold for power on and off, quick press to switch between different inputs
-	5	Menu	Open the system menu to access settings (see pg.# for more information)
-	6	Play/Pause	Installation pipes
	7	Skip Back/Forward	Previous/Next to skip next
	8	Volume Down/Up	Volume up/volume down

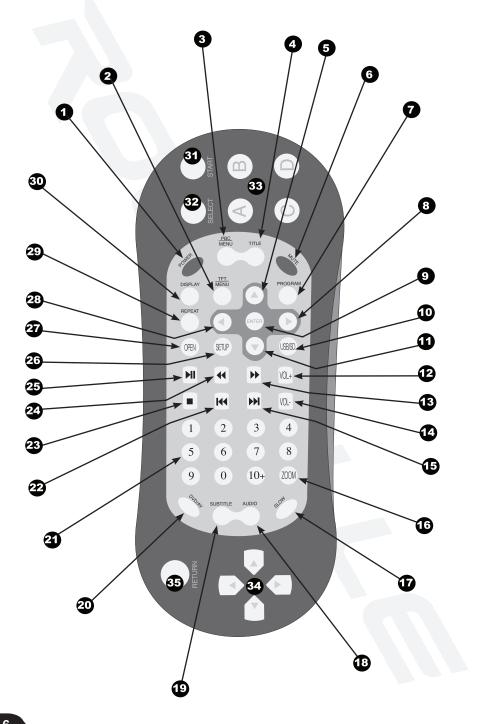

1	Power	Turn unit on and off
2	TFT Menu	Access unit settings menu
3	PBC Menu	Setup playback settings
4	Title	Return to the title screen
5	Up Arrow	Navigate up when available
6	Mute	Mute audio
7	Program	Adjust unit functionality.
8	Right Arrow	Navigate right when available.
9	Enter	Select highlighted item.
10	USB/SD	Switch between USB and SD devices.
11	Down Arrow	Navigate down when available.
12	Volume Up	Increase volume level.
13	Fast Forward	Fast forward selected music or video.
14	Volume Down	Decrease volume level.
15	Next	Skip to next song, photo, page, or video.
16	Zoom	Zoom in on media content.
17	Slow	Decrease frame rate playback of videos.
18	Audio	Change the audio channel.
19	Subtitle	Toggle subtitles on/off when available.
20	DVD/AV	(DVD function not available)
21	Number Pad	Enter digits 1-9. Use "10+" for faster input.
22	Previous	Skip to previous song, photo, page, or video.
23	Stop	Stop media playback.
24	Rewind	Rewind selected music or video.
25	Play/Pause	Play and pause media content.
26	Setup	System Setup
27	Open	Opens the disc tray
28	Left Arrow	Navigate left when available.
29	Repeat	Repeat current song or video in playlist.
30	Display	Adjust Video display size.
31	Game Start	For in game use.
32	Game Select	For in game use.
33	Game Input	For in game use.
34	Game Movement	For in game use.
35	Return	Return to the main menus.

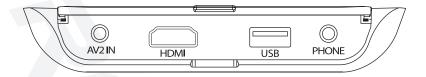 

			_
_	AV2	Input for audio playback via a 3.5mm cable	
	HDMI in for audio and video playback of supporte devices		
	USB	USB port for media storage device (see pg.10 for information on browsing media devices)	
	Phone	Plug in headphones	
_	SD	Use the provided USB adapter to access SD cards	

Supported Video Types

- AVI
- DIVX
- MPG
- DAT
- FLV
- RMVB
- VOB
- MP4
- MOV
- OGG
- ASF

Supported Audio Types

- MP3
- WMA

Supported Game Types

SMF

Supported E-Book Types

TXT

Supported Photo Types

- JPG
- PNG
- BMP

DVD Operation


- · Insert disc into the slot with the label facing up
- Playback will begin automatically
- To return to DVD playback press MODE on the unit front panel until DISC is selected
- Use the remote or the unit front panel to conrol playback

Supported Disc Types

- DVD
- S-VCD
- VCD
- Audio CD
- MP3 Disc

Touch DVD Controls

Touch capabilities only available on the RTSVD961 unit.

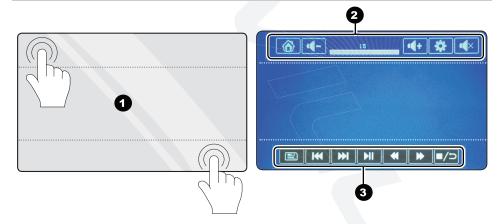

	1	Touch Points	While in DVD playback only the top and bottom areas are touch compatible
•	2	Top Menu	Return home, increase/decrease volume, access DVD settings, and mute
	3	Playback Menu	The playback menu provides the basic playback options

Browsing Files







Select the type of media you'd like to browse
Audio/Photo/Games/Video/Books

Browse folders by selecting them to see their contents or select return to the previous folder

Select the desired file to begin playback (See pg.8s for list of supported file types)

Picture

Fine tune the display settings.
Brightness, contrast, saturation,
sharpness, hue, and orientation.
Adjust manually or use one of the
presets found under "Picture Mode".



Sound

Fine tune the sound settings. Bass, Treble, Balance, FM Radio Frequency, IR Radio Frequency, Volume. Adjust manually or use one of the presets found under "Sound Mode".



System


Change system settings. Language, OSD Duration, Video Output, Reset. OSD Duration changes the amount of time the menu will wait before disappearing from inactivity. Reset restore the factory default settings.




Player


Adjust disc playback options. TV system, screen save, aspect ratio, password, rating, resume, audio language. TV system switches between PAL and NTSC mode. Use password and rating to set parental restrictions for child use.



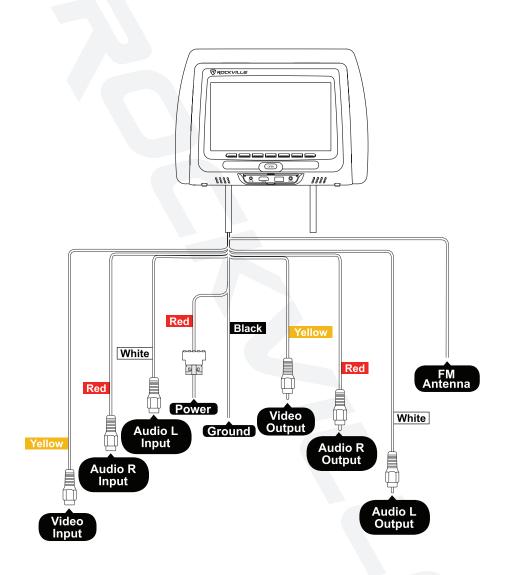

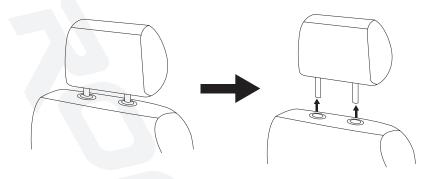

- Remove the existing headrest from the seat
- Adjust the mountings poles of the Rockville headrest unit to fit in the vehicle's headrest sockets
- Feed the wiring through the hole, down to the bottom of the seat (make sure none of the cables are pinched)
- Once the wires are through, finish inserting the Rockville headrest unit unit it clicks into place
- You can now adjust the height of the unit as you would the vehicle's factory headrest unit
- Refer to the wiring guide for proper connection of wires

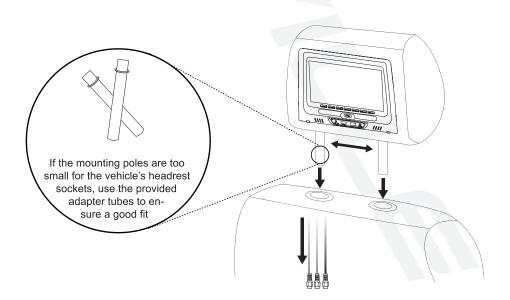

Troubleshooting

ISSUE	SOLUTIONS
Unit does not start up	 Check if the power cable is connected correctly Use remote to turn on the unit, check if the battery in the remote control is installed correctly
No picture	 Check power Check video connection wires Check the vertical scanning frequency of VGA input
Picture showing abnormally	 Check power Check video connection wires Check the vertical scanning frequency of VGA input
Remote control not responding	Replace the battery in the remote control

Visit us at:

Rockvilleaudio.com