# TROCKVILLE KPS KARAOKE SPEAKERS W/WALL BRACKETS MOUNTING INSTRUCTIONS

Thank you for purchasing this set of Rockville KPS Karaoke Speakers with wall Brackets. Please read these instructions carefully before use. Make sure all parts are included. If any parts are missing or you need assistance, please contact our technical help line at 1-646-758-0144, 24 hours a day/7 days a week. Alternatively, scan the QR code or go to the URL to access how-to video(s), the owner's manual, and other important information you may need to get the most out of your item.










rockvillesupport.com/kps80


rockvillesupport.com/kps10

rockvillesupport.com/kps12


## **SPEAKER DETAILS**

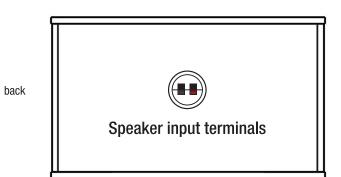


## WALL MOUNT INSTALLATION

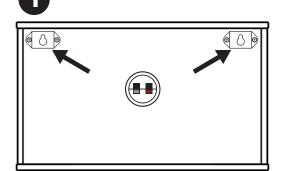


The KPS10 and the KPS12 feature dual wall mount brackets.

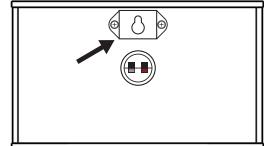


The KPS60 and the KPS80 feature a single wall mount bracket.

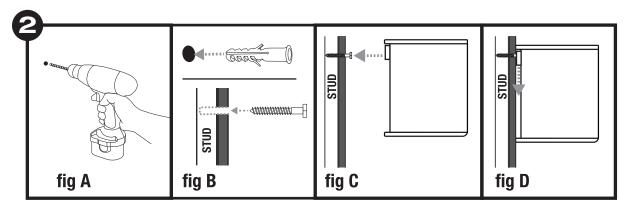

To mount the KPS units, make a mark on the wall where you wish to mount the speaker. Using a drill, make a hole where you made your mark (fig A). Repeat for your other marks. We recommend using wall anchors (fig B; not included) or drilling into a stud. If you are using anchors, make sure the holes are deep enough to accommodate them. Once the mounting screws (not included) are in place, simply lift the speaker and slide onto the mounting screws (fig C). Now tug the speaker down slightly to ensure that it is seated properly (fig D).

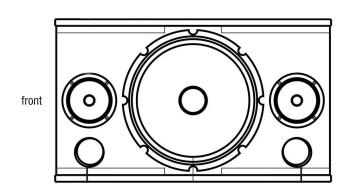


SPEAKER STAND INSTALLATION The KPS speakers can be pole mounted using the Rockville RVSS2 speaker stand (sold separately) and the Rockville RVSSA1 universal 35mm speaker stand adapter (sold separately). Both of these items can be purchased at RockvilleAudio.com

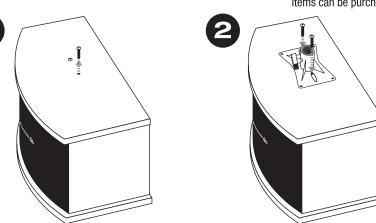

Use a Phillips head screwdriver to remove the two fixing screws located at the bottom of the unit.





Affix the pole mount tray using the two screws.

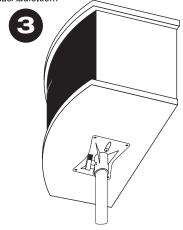

Carefully mount the speaker onto the any standard speaker stand. Secure the speaker to the stand by tightening the locking knob.

OPTIONAL SWIVEL WALL MOUNT INSTALLATION The KPS speakers can be wall mounted using the Rockville RPW20 adjustable wall mount bracket (sold separately) and the Rockville RVSSA1 universal 35mm speaker stand adapter (sold separately). Both of these items can be purchased at RockvilleAudio.com

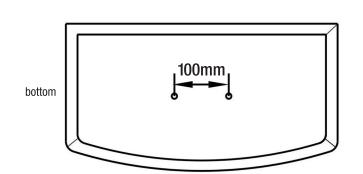


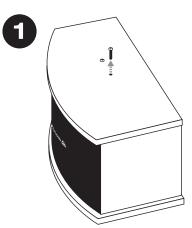

Use a Phillips head screwdriver to remove the two fixing screws located at the bottom of the unit.



Affix the pole mount tray using the two screws.

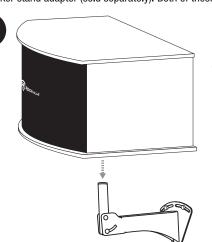

Carefully mount the speaker onto the RPW20. Secure the speaker to the wall mount bracket by tightening the locking knob. To adjust the position of the speaker, follow the directions included with the RPW20