

# ROCKVILLE

## RHB70

COMPACT POWERED HOME THEATER SPEAKER  
SYSTEM w/BLEETOOTH, USB, and FM RADIO

### OWNER'S MANUAL

**ATTENTION:**  
**WATCH THIS VIDEO BEFORE FIRST USE!**

#### *Who reads manuals?*

Scan the **QR code** or go to **rockvillesupport.com/rhb70** to access how-to video(s), the owner's manual, and other important information you may need to get the most out of your item.

**If you prefer written instructions, please read ahead!**

*With Rockville you get many options.*



**Missing items?** If you ordered a bundle that includes more than one product and you are missing part of your bundle then it just means your order shipped from two different warehouses. You will receive the remaining items very soon. If you have any concerns or inquiries, feel free to call our customer support center at 1-646-758-0144, 24 hours a day/7 days a week.

Thank you for purchasing this Rockville RHB70 Compact All-In-One Home Theater Speaker system. Please read this owner's manual carefully for proper use of your RHB70. Should you need assistance, please call our technical help line at 1-646-758-0144, 24 hours a day/7 days a week.

## INCLUDES

- User Manual
- Speaker
- 3.5mm to dual RCA cable
- Remote Control (Battery included)

---

## IMPORTANT SAFETY INSTRUCTIONS

 


**TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE AMPLIFIER PLATE. NO SERVICEABLE PARTS INSIDE. REFER ANY REPAIRS TO THE ROCKVILLE SERVICE**

---


- Do not place this speaker on an unstable surface. The speaker may fall over, causing serious injury to a child or adult and serious damage to the unit.
- Do not use this speaker near water; for example, near a bathtub, sink, in a wet basement, or near a swimming pool.
- The speaker should be situated away from heat sources such as radiators, heat registers, stoves, or other devices that produce heat.
- This speaker should be connected to a power supply outlet of the same voltage as that which is specified on the amp plate of the unit. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it exits from the unit.
- Clean only with a soft damp cloth. Unplug this product from the wall outlet before cleaning.
- Upon completion of any servicing or repairs, request the service the service center/shop uses factory authorized replacement parts. Replacement with unauthorized parts may result in fire, electrical shock, or other hazards.

# FRONT PANEL

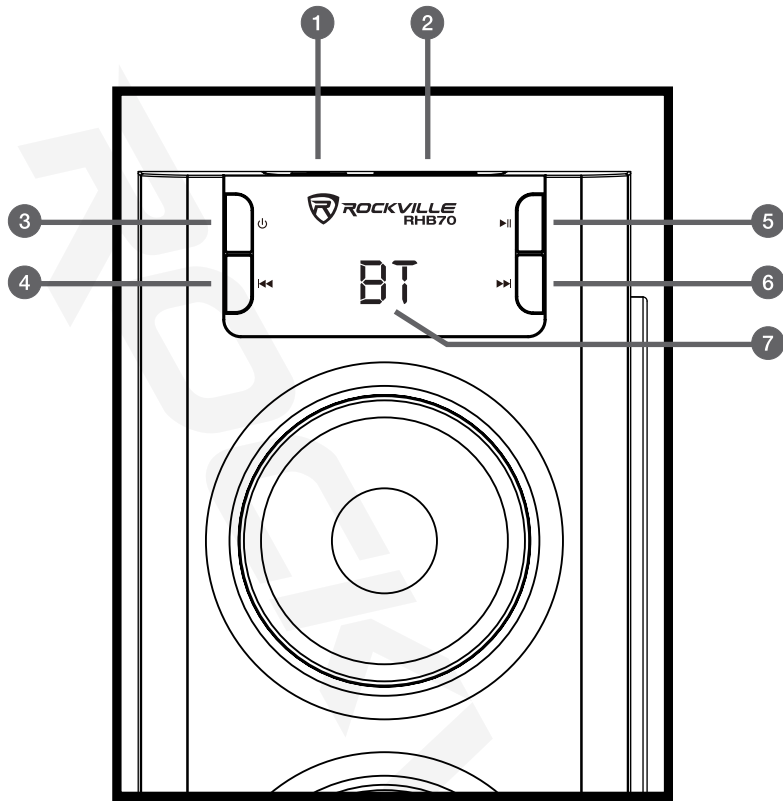


- 1. USB port
- 2. SD slot
- 3. Stand-by/Mode
- 4. Previous track/Volume -
- 5. Play/Pause/Mute/Automatic station search (FM radio)
- 6. Next track/Volume +
- 7. Display screen

 BACK PANEL

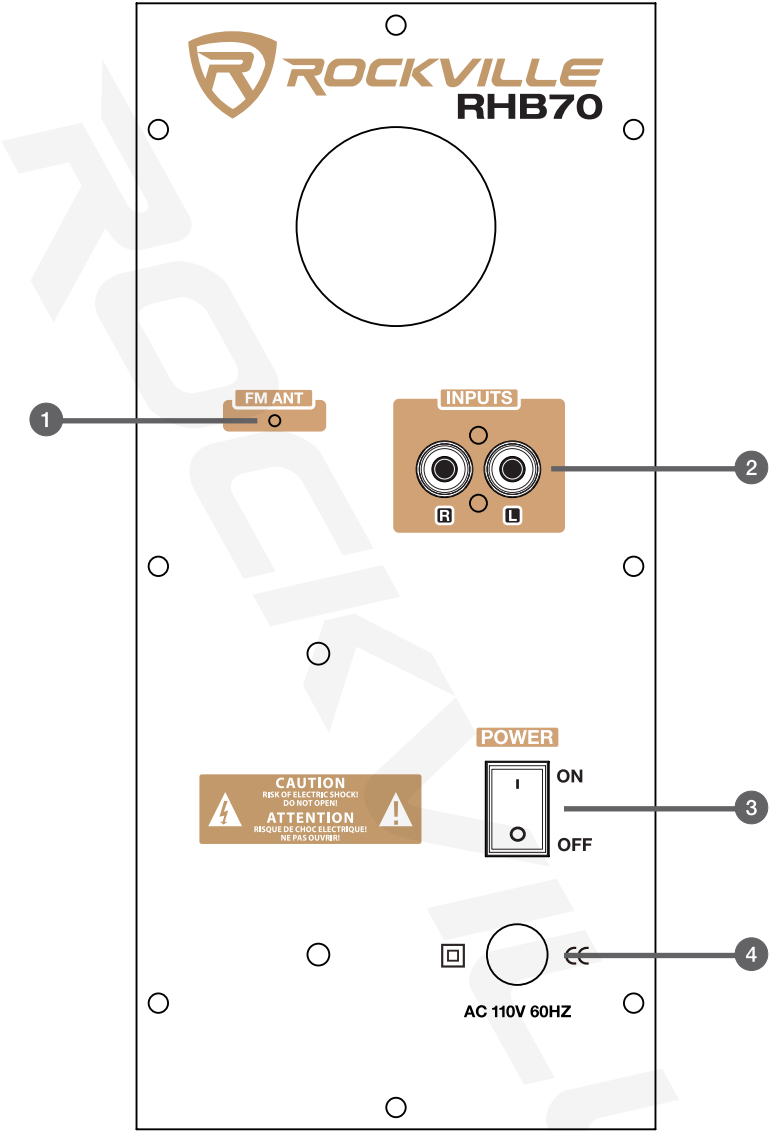

- 1. FM antenna
- 2. RCA inputs
- 3. Power switch
- 4. Power input

## REMOTE CONTROL FUNCTIONS

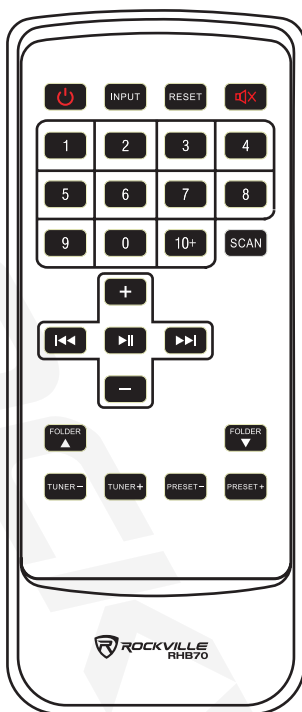 

**STAND-BY:** switch between stand by and power on mode

**INPUT:** switch input modes

**RESET:** resets volume level to default setting

**MUTE:** mutes the speakers

**NUMBER PAD:** number pad used to direct select tracks when in USB/SD mode. In radio mode it is used to change saved FM stations or FM frequency.

**10+:** in USB/SD mode used to skip tracks in intervals of 10

**SCAN:** auto scan FM channels

**+/-:** Master volume control

**⏮ / ⏭:** Previous track/next track in USB/SD/Bluetooth mode. Press and hold to rewind or fast forward.

**⏸:** Play/Pause in USB/SD/BT modes

**FOLDER ▲ / ▼:** navigate folders in USB/SD mode


**TUNER +/-:** Manually tune FM stations

**PRESET +/-:** select previous/next saved FM station

## USB/SD

 1. Make sure the unit is plugged in and the power switch is in the ON position.
2. Press the mode button (power button) on the front panel or push the INPUT button on the remote control until the digital read out shows “USB” or “SD”.
3. Plug in your SD card or USB flash drive. The unit will automatically read the files and begin playing music.
4. Press the Play/Pause buttons to start and stop music playback.
5. Press VOL-/VOL+ on the remote control to decrease or increase the volume.
6. Press the Previous/Next buttons to navigate through tracks. Press and hold to increase/decrease volume.
7. Press and hold the Previous/Next buttons on the remote control to rewind or fast forward.
8. Press the Folder buttons on the remote control to change folders in USB/SD mode.

**Please note:** SD cards and USB drives should be formatted as exFAT. To format or reformat your SD card or USB drive, follow the directions provided by the manufacturer. Music file formats accepted are MP3 and WMA. Files must be properly formatted, simply changing the file extension to .MP3 or .WMA will not work.

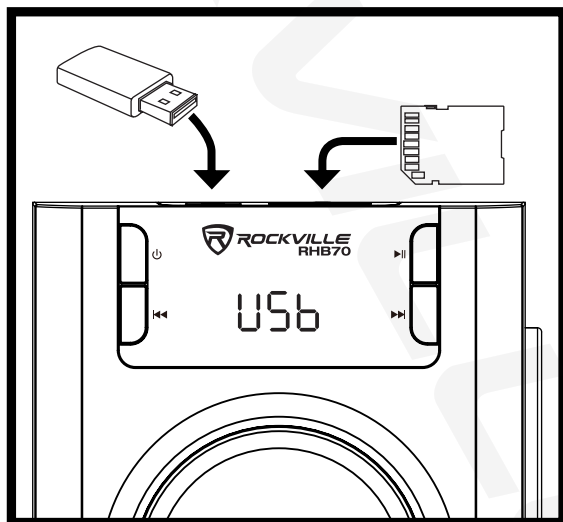



# BLUETOOTH

## Pairing:

1. Press the mode button (power button) on the front panel or push the INPUT button on the remote control until the digital read out shows "BT".
2. Ensure your device is in Bluetooth mode, discoverable, and within three feet of the unit.
3. Under list of available devices search for and select ROCKVILLE.
4. Some mobile devices may ask for a pass code. Please use: 0000.
5. Speaker will automatically connect with previously paired device.

## Bluetooth Music:

  1. Press the Play/Pause buttons to start and stop music playback.
2. Press VOL-/VOL+ to decrease or increase the volume.
3. Press the Previous/Next buttons to navigate through tracks. Press and hold to increase/decrease volume.

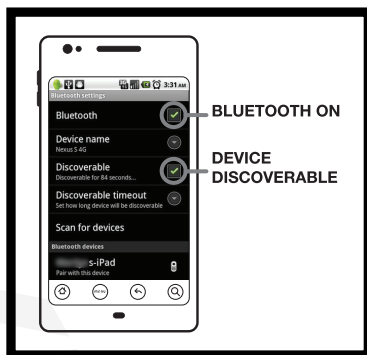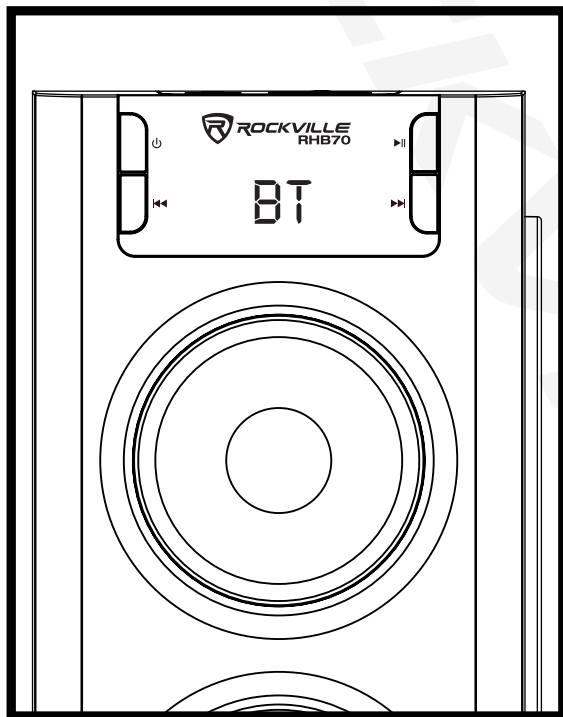

# RCA

This input can be used to connect stereo signal sources such as TVs, Digital set-top boxes, game consoles, DVD players, CD, players, etc.

# FM RADIO

1. To scan through stations press the Scan button on the remote or press and hold the Play/Pause button on the unit. The stations will be saved automatically.
2. Press VOL-/VOL+ on the remote control to decrease or increase the volume.
3. Press the Previous/Next buttons on the unit to navigate through saved stations. Press and hold to increase/decrease volume.
4. To manually navigate stations press Tune +/- on the remote control. To directly enter a frequency use the number pad.
5. To improve reception raise the FM cable above the unit.

# TROUBLESHOOTING

PROBLEM	SOLUTION
No power	1. Check power switch/connections.
Poor or no radio reception	1. Make sure antenna cables are properly connected and above the unit.
Bluetooth pairing fails	<div>1. Check to see that both devices are turned on and that your Bluetooth device is discoverable.</div> <div>2. Turn both devices off and then on again.</div> <div>3. Make sure you've selected the proper source.</div> <div>4. Make sure that the Bluetooth device is within 3 feet of the unit.</div> <div>5. Move both devices away from other Bluetooth devices, microwaves, wireless routers, and other electronics.</div> <div>6. Make sure that the unit is not paired to a previously paired device.</div>
Files on SD card/USB memory device will not play back	<div>1. Make sure you've selected the proper source (USB/SD).</div> <div>2. Make sure that the audio files are in the proper format (see page 6).</div> <div>3. Make sure that the SD card or USB drive are properly formatted (see page 6).</div> <div>4. Make sure that the SD card or USB drive is properly plugged in.</div> <div>5. Check the SD card or USB drive for damage.</div>



## FEATURES

- Peak Power: 100 Watts
- Program Power: 50 Watts
- RMS Power: 25 Watts
- Built-in high powered amplifier with incredible sound quality
- 2.1 channel design with (2) 3" speakers for highs and a 4" subwoofer for mids and lows
- Built-in Bluetooth to stream music from any phone, tablet, or other Bluetooth device
- Uses top quality Bluetooth chip with enhanced data rate and 35 foot range
- USB input (up to 32GB, drive must be formatted as exFAT, WMA and MP3 files only)
- Micro SD memory card slot (up to 32GB, drive must be formatted as exFAT, WMA and MP3 files only)
- RCA Aux input
- LED display to view volume, track details, FM channels, and other details
- Convenient digital controls on front panel
- Remote control with direct track selection
- Full wooden enclosure for pure sound
- Cherry wood enclosure finish
- Frequency response: 40Hz – 20KHz
- Channel separation:  $\geq 50\text{dB}$  (1KHz)
- Input voltage required: 110V AC
- Unit dimensions (W x H x D): 4.73" x 9.65" x 10.64"
- Unit Weight: 5.43 LBS

# FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION

Responsible party name: Rockville

Address: 600 Bayview Ave,  
Entrance A,  
Inwood, NY 11096

Hereby declares that the product Rockville RHB70 compact all-in-one home theater tower speaker system complies with FCC rules as mentioned in the following paragraph:

 
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

מכירת רכב

# ***ROCKVILLE***

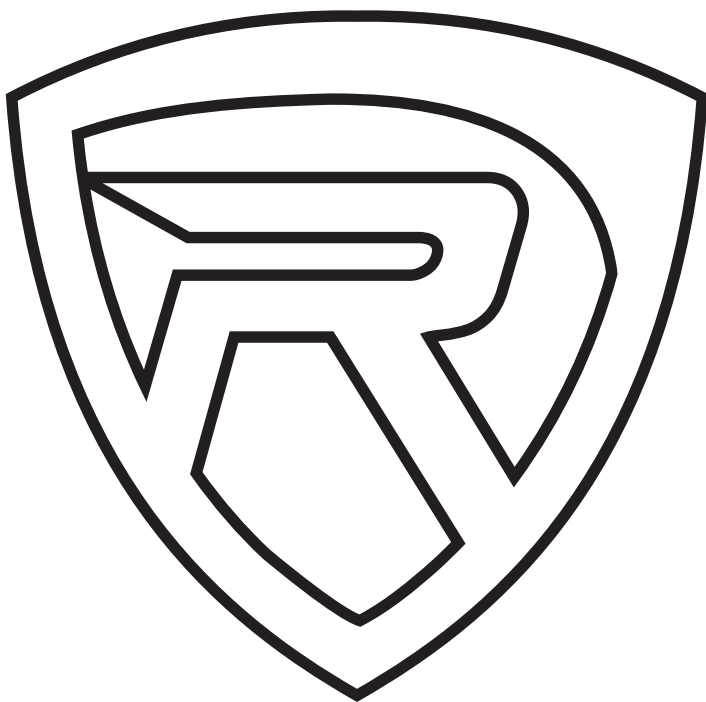

**RockvilleAudio.com**

© 2023 ROCKVILLE // Features and specifications are subject to change and/or improvement without notice.