

ROCKVILLE | **ROCKFORCE 192**

QUICK START GUIDE

The ROCKFORCE 192 is an easy to use, powerful and intelligent DMX controller. It features 192 DMX channels, 30 banks, 8 programable scenes, 6 user set chases, and can control 12 intelligent lights on up to 16 channels.

Connections

1. Power switch
2. DMX Output
3. 9V DC Power input




Creating a Scene


1. Select the desired bank by pressing the BANK up/down buttons.



2. Select the desired fixture by pressing the appropriate SCANNER button. Select the color you want for the fixture by using the sliders.

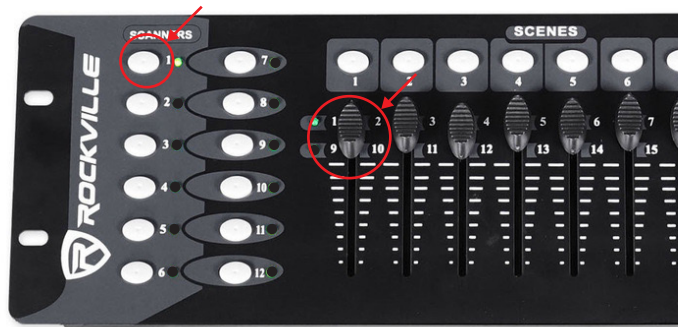

3. To add the scene, press the PROGRAM button for 3 seconds to enter program mode. Now press MIDI/ADD then press the SCENE button for the specific scene. The display screen on the unit will flash indicating that the scene has been added. To add more scenes within that bank, repeat steps 2 and 3. To create additional banks, repeat steps 1 – 3.

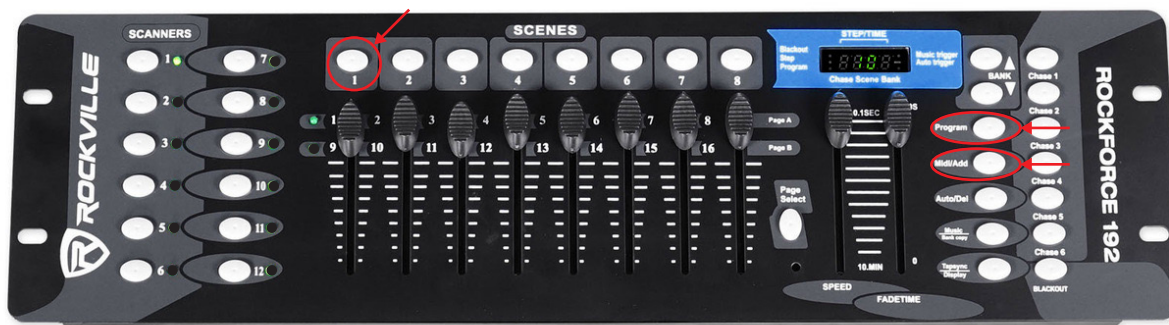


Setting a Chase

1. Make sure you are in program mode. Press the desired CHASE button.



2. Select your SCENE.

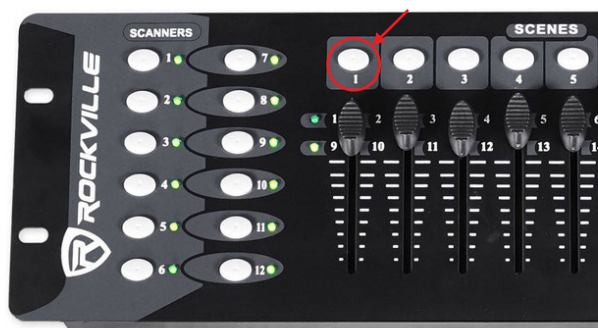

3. Press the MIDI/ADD button. The display screen will flash indicating that the scene has been added.



To add more scenes to the chase, repeat steps 2 – 3. To add more chases, repeat steps 1 – 3.

Running a Chase

1. Press the desired CHASE button.



2. Press the AUTO button.



Copying a Bank

With the ROCKFORCE 192 you can copy all the scenes in a bank and add them to a previously made chase.

1. Make sure you are in program mode. Select the desired bank using the BANK up/down buttons. Then choose the desired CHASE.



2. Press the BANK COPY and MIDI/ADD buttons simultaneously.



To add more banks to the chase, select the desired bank and repeat step 2. To add banks to a different chase, repeat steps 1 – 2.