

ROCKPAR TRI Operating Instructions

Should you need assistance, please call our technical help line at 1-646-758-0144, 24 hours a day/7 days a week. For how-to videos and other helpful information, visit the URLs or scan the QR codes on the right.



rockvillesupport.com/rockpar-tri-white



rockvillesupport.com/rockpar-tri-black

Settings

Use the MENU button to enter the settings menu. Press and hold the UP and DOWN buttons to quickly scroll through the menu items. Press ENTER to make a selection and use the UP and DOWN buttons to scroll through the options or numerical values for that setting. Press the ENTER button to save your selection. If you press the ENTER button on any setting, the saved mode/settings/values will remain in place even after powering off the unit and will be the default when you power the unit back on.

Display Mode	1 st Menu Value	2 nd Menu Value	Description
d.001	d001 – d512		Set DMX address code
IP.01	IP01 – IP64		DMX group address: IP01=d001, IP02=d008, IP03=d015 ...
A1.01	A1.01 – A1.11		Color selection: Use the up/down buttons to select color.
A2.01	A2.01 – A2.32		Color cycle change: Use the up/down buttons to adjust speed.
A3.01	A3.01 – A3.11		Gradual change. Use the up/down buttons to select preset modes.
		A3.01 – A3.32 (flashing)	After selecting mode, press ENTER to access submenu. This menu will flash on screen. Use the up/down buttons to adjust speed.
A4.01	A4.01 – A4.04		Select sound mode sensitivity. 1 being the least sensitive, 4 being the most.
A5.01	A5.01 – A5.07		Strobe color selection.
		A5.01 – A5.32 (flashing)	After selecting mode, press ENTER to access submenu. This menu will flash on screen. Use the up/down buttons to adjust speed.
r255	r000 – r255		Red dimmer
G255	G000 – G255		Green dimmer
b255	b000 – b255		Blue dimmer

DMX Controls

When using a DMX controller, use the charts below to reference each channel's function.

7-Channel Mode

Channel	Function	Value	Description
1	Mode	0 – 10	Manual dimming, Ch4 – Ch7 only.
		10 – 50	A1: Color selection
		51 – 100	A2: Color cycle change
		101 – 150	A3: Gradual change
		151 – 200	A4: Sound mode
		201 – 255	A5: Strobe
2	Color	0 – 255	Changes the color for the Mode (Ch1) function being used.
3	Speed	0 – 255	Changes the speed for the Mode (Ch1) function being used.
4	Master dimmer	0 – 255	Adjust overall brightness of Ch5 – Ch7.
5	Red	0 – 255	Adjust individual color brightness (Ch1 must be set to Manual dimming mode to engage these channels)
6	Green	0 – 255	
7	Blue	0 – 255	

Remote Control Functions

1. Powers the LED bulbs ON or OFF.
2. A1: Press this button to enter Color Selection mode. Use the COLOR +/- buttons to select colors. Use the SPEED +/- buttons to adjust brightness.
3. A2: Press this button to enter Color Cycle mode. Use the SPEED +/- buttons to adjust speed.
4. A3: Press this button to enter Gradual Change mode. Use the COLOR +/- buttons to cycle through available gradual change modes. Use the SPEED +/- to adjust the speed of the selected mode.
5. A4: Press this button to enter Sound mode. Use the SPEED +/- buttons to adjust sensitivity.
6. A5: Press this button to enter Strobe mode. Use the COLOR +/- buttons to select strobe colors. Use the SPEED +/- buttons to adjust speed.
7. COLOR +/-: Select colors or mode functions.
8. SPEED +/-: Adjust speed or select mode functions.
9. DMX +/-: Use these buttons to adjust DMX values.
10. IP: Use these buttons to adjust the DMX group address.

