

ROCKVILLE

RPB-XL

LARGE PORTABLE BLUETOOTH SPEAKER

 
OWNER'S MANUAL

WHO READS MANUALS?

Instead, go to vimeo.com/4 or scan the QR code and watch a short video that shows you how to set this item up and how to use it.

If you prefer written instructions, please read ahead!

With Rockville you get many options.

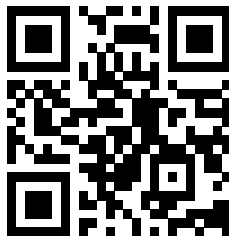

Missing items? If you ordered a bundle that includes more than one product and you are missing part of your bundle, then it just means your order shipped from two different warehouses. You will receive the remaining items very soon. If you have any concerns or inquiries, feel free to call our customer support center at 1-646-758-0144, Monday through Thursday, 9am to 10pm EST, and Fridays, 9am to 3pm EST.

Thank you for purchasing this Rockville RPB-XL Large Portable Bluetooth Speaker with TWS. Please read this guide carefully. Should you need assistance, please call our technical help line at 1-646-758-0144, Monday through Thursday, 9am to 10pm EST, and Fridays, 9am to 3pm EST.

Included

- RPB-XL Bluetooth Speaker
- 3.5mm to 3.5mm AUX Cable
- USB Type C Charging Cable
- Owner's Manual
- Warranty card

 
IMPORTANT SAFETY INSTRUCTIONS



- To reduce risk of electric shock, never open the unit. There are no serviceable parts, refer service to an authorized Rockville service center.
- Do not expose this unit to any kind of moisture.
- Please ensure that the unit is situated in a properly ventilated area.
- Make sure the unit is placed on a level and stable surface.

Functions

1. USB Type C power input port
2. 3.5mm AUX input/reset switch (hidden inside of the jack)
3. USB port and Micro SD port (file size limit: 64GB)
4. USB DC 5V power output port
5. Bluetooth pairing button
6. Previous/Volume -
7. Playback status LED indicator
8. Microphone
9. TWS pairing LED indicator
10. Next/Volume +
11. Play/Pause/Hands free calling
12. Battery status LED indicators
13. Mode/Power: press to change modes (Bluetooth, USB, SD), press for 2 seconds to power on/off.
14. TWS pairing button

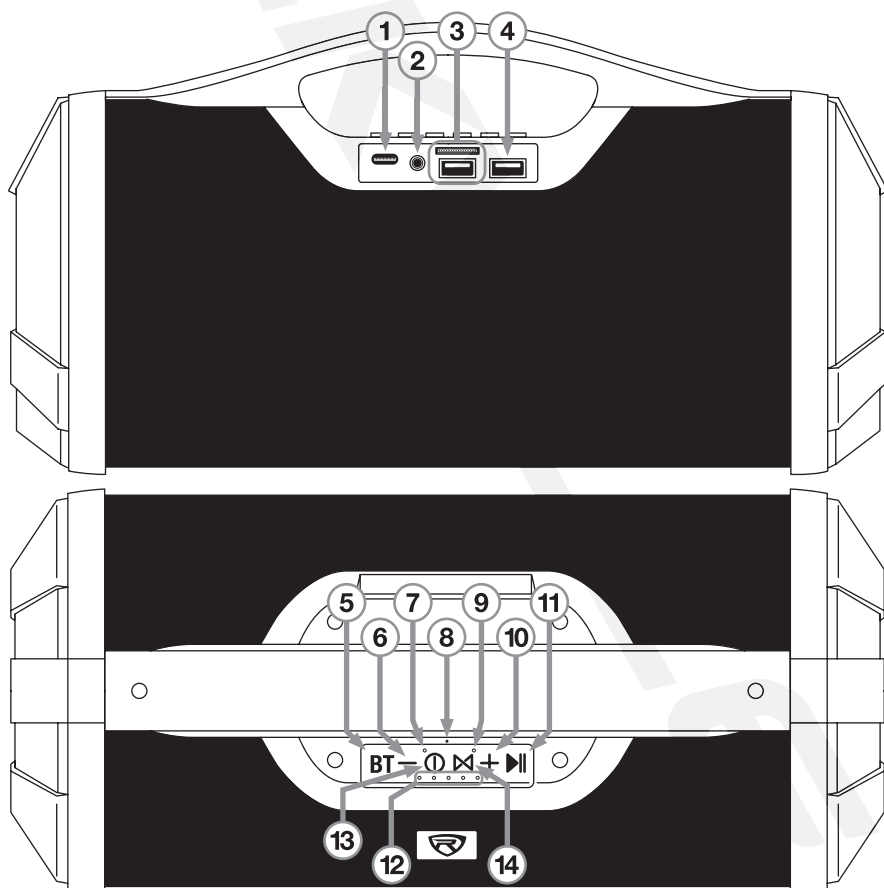

Bluetooth

Pairing

1. Upon powering on, the Bluetooth indicator light will flash quickly and you will hear a voice prompt indicating that the speaker is in pairing mode. **Please note:** if the device is in another mode, press the Bluetooth button to return to Bluetooth mode. Press this button for two seconds to disconnect current BT device and enter pairing mode.
2. Ensure your device is in Bluetooth mode and discoverable.
3. Under list of available devices search for and select RPB-XL.
4. If pairing is successful, you will hear a tone and the LED indicator will remain lit.
5. To unpair the unit, press the BT button for two seconds or disconnect via your input device. You will hear a tone indicating the unit has successfully disconnected. The RPB-XL will remember and automatically connect to the last paired device.

! ATTENTION: WHEN PAIRING YOUR BLUETOOTH DEVICE, PLEASE MAKE SURE THE VOLUME ON THE DEVICE IS TURNED UP.

Music

Press the -/+ buttons to raise or lower the volume. Press and hold -/+ buttons to navigate through tracks. Use the PLAY/PAUSE button to control playback. Playback functions can also be controlled from your input device.

Hands-Free Operation

1. To answer or end a call press the PLAY/PAUSE button.
2. Press and hold the PLAY/PAUSE button reject an incoming call.

True Wireless Stereo (TWS)

1. Turn both speakers on and ensure that neither one of the speakers is paired to another device.
2. Press and hold (3 – 5 seconds) the TWS button on one of the speakers. The TWS LED indicator will flash white. This will be the primary speaker. It will connect automatically with the secondary speaker and the primary speaker's TWS indicator light will remain solid white.
3. Search for and select RPB-XL on your device's list of available Bluetooth devices. Both speakers will automatically connect to your device. The primary unit will act as the left channel and the secondary unit will act as the right channel.
4. Play back functions can be controlled by either speaker or via your device.
5. To disconnect, press and hold the primary speaker's TWS button for 3 – 5 seconds.

USB/SD Mode

1. Insert Micro SD card or USB flash drive (up to 64GB supported) into the corresponding port at the rear of the unit. Alternately, you can press the MODE button to select the desired input source.
2. Micro SD card/USB input should be automatically recognized and music will begin to play. The playback LED indicator will be solid white.
3. Press the -/+ buttons to raise or lower the volume. Press and hold -/+ buttons for 5 seconds to navigate through tracks. Use the PLAY/PAUSE button to control playback.

Aux Mode

1. Upon plugging in a 3.5mm jack, the unit will automatically switch to AUX input and begin to play music. The playback LED indicator will be solid white.
Please note: If you plug in the 3.5mm cable prior to turning the unit on, use the MODE button to select AUX mode.
2. Press the -/+ buttons for to raise or lower the volume. Use the PLAY/PAUSE button to control playback.

Charging

When the unit's power is low, it will automatically shut off indicating that it needs to be charged. Please follow the charging procedure below.

1. Plug the included micro USB Type C cable into the port marked CHARGING.
2. While charging, the LED charging indicators will blink. When 3 of 5 LEDs are blinking, the unit is 60% charged. When 4 of 5 LEDs are blinking, the unit is 80% charged. 5 solid red LEDs indicate that the speaker is fully charged.
3. Fast charge time is 3 hours.
4. During playback, if 4 of 5 LEDs are on, the unit is at 80% capacity. When 3 of 5 LEDs are on, the unit is at 60% capacity.

Please note: During normal operation the LED indicators will be off. To check the battery status, short press any button. The lights will illuminate for 10 seconds and then turn off. This function helps the unit conserve battery power.

Factory Reset

To return the unit to its original settings, use a paper clip or toothpick to press the reset button located inside of the AUX jack.

Features and Specifications

- Built-in dual USB inputs (One for USB audio playback and the other is a power bank to charge your phone)
- TWS - True Wireless Stereo Linking of 2 speakers
- RMS Power: 18w for the bass and 6w + 6w for highs =30 Watts RMS
- Premium sound quality
- Uses the best drivers and 2 passive radiator subwoofers to give amazing frequency range and sound quality
- Uses DSP tuning and top of the line drivers to achieve a very balanced sound
- Actions 4.2 BT chipset is energy efficient and offers high fidelity streaming
- 33-Foot Maximum Bluetooth Range
- Built-in SD and USB ports (supports cards or sticks up to 64GB)
- Supported file formats: MP3/WMA/APE/FLAC/WAV
- 3.5mm aux input
- Fast Charge Time: 3 Hours
- 7.4v/4000mAh Lithium-ion battery supports up to 32 hours playback at 20% volume, 16 hours at 40% volume, and 5 hours at max volume
- Battery charges with included USB Type-C cable
- 5 LED battery status indicators
- Distortion: Less than 1%
- Frequency Response: 60Hz – 20kHz
- Play, Pause, Skip Forward, Skip Back, Volume Up, Volume Down
- Will control next song, pause, play on popular apps like Pandora, Spotify, etc.
- The built-in microphone allows you to make and receive phone calls hands-free
- Compatible with any Bluetooth devices such as iPad, iPhone, iPods, Laptops, Android phones, other cell phones, and MP3 Players
- iPhone and Android devices will display the battery life of the speaker when connected through Bluetooth
- Plastic Rubberized Handle which is easy for you to carry everywhere
- Product Dimensions: 12.56" (L) x 5.31" (W) x 5.98" (H)
- Product Weight: 3.46 lbs
- Available Colors: black or camo

Troubleshooting

PROBLEM	SOLUTION
No Power	<ol style="list-style-type: none">1. Make sure the unit is on.2. Make sure the unit is charged. See page 5 for charging instructions.
Bluetooth/ TWS pairing fails	<ol style="list-style-type: none">1. Check to see that both devices are turned on and that your Bluetooth device is discoverable.2. Make sure you've selected the proper source.3. Make sure that the Bluetooth device is within 5 feet of the unit.4. Check the speaker and input source volume settings.5. Move both devices away from other Bluetooth devices, microwaves, wireless routers, and other electronics.6. Make sure that the unit is not paired to a previously paired device. See the Bluetooth and TWS instructions on page 4.
No USB/SD playback	<ol style="list-style-type: none">1. Make sure you've selected the proper source.2. Check that the SD card or USB flash drive is not damaged.3. Make sure that the SD card's or USB flash drive's capacity is no more than 64GB.4. Make sure that the music files are in one of the following formats: MP3, WMA, APE, FLAC, or WAV.

FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION

Responsible party name: Rockville

Address: 600 Bayview Ave,
Entrance A,
Inwood, NY 11096

 
Hereby declares that the product Rockville RPB-XL portable Bluetooth speaker complies with FCC rules as mentioned in the following paragraph:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ROCKVILLE

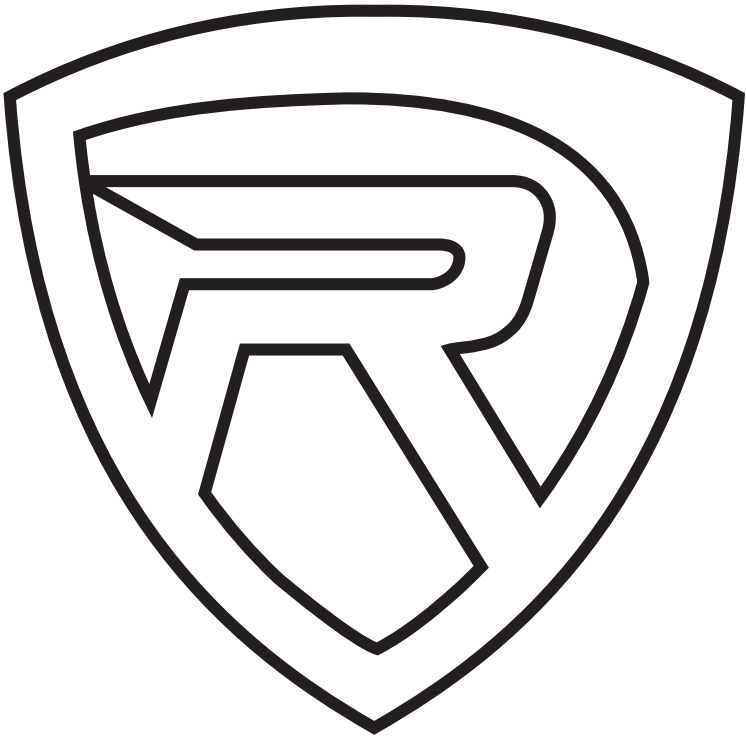

RockvilleAudio.com

© 2021 ROCKVILLE // Features and specifications are subject to change and/or improvement without notice.