


ROCKVILLE

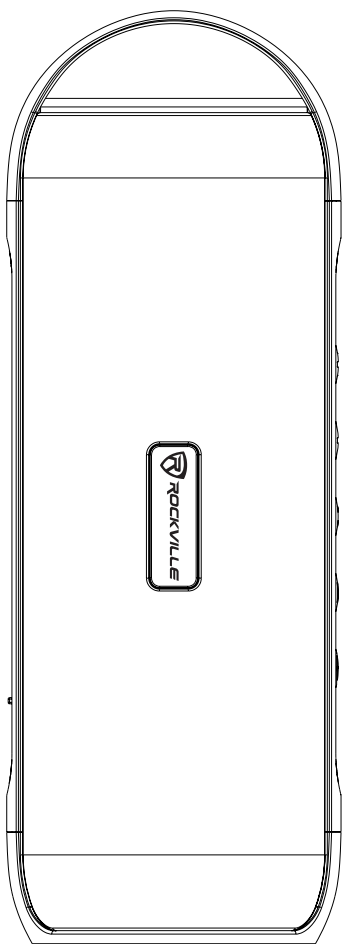

OWNER'S MANUAL

RPB25
PORTABLE BLUETOOTH SPEAKER

Thank you for purchasing this Rockville RPB25 Portable Bluetooth Speaker.

The RPB25 has a unique cylinder shape with 360° sound dispersion technology. This means the speaker will disperse sound in all directions no matter which way you face the speaker. It also has 2 speakers, each on separate channels, which gives you true stereo sound. This is something that other speakers on the market cannot offer. Finally, it features TWS linking which allows you to wirelessly connect 2 of these speakers together to give you stereo sound.

Please read this guide carefully. Should you need assistance, please call our technical help line at 1-646-758-0144, Monday through Friday, 9am to 5pm EST.

Included

- RPB25 Bluetooth Speaker
- 3.5mm MP3 Cable
- Micro USB Charging Cable
- Lanyard
- Owner's Manual
- Warranty card


IMPORTANT SAFETY INSTRUCTIONS



- To reduce risk of electric shock, never open the unit. There are no user-serviceable parts, refer service to an authorized Rockville service center.
- Do not expose this unit to any kind of moisture.
- Please ensure that the unit is situated in a properly ventilated area.
- Make sure the unit is placed on a level and stable surface.

Features and Specifications

1. LED indicator: blue = power on/red = charging
2. Power input port, DC 5V: used to recharge internal battery
3. 3.5mm Aux input
4. USB port (supports flash drives up to 32GB)
5. Micro SD port (supports cards up to 32Gb)
6. Next/Volume +
7. Previous/Volume -
8. Play/Pause/Hands free calling
9. Mode
10. Power On/Off. If unit is inactive for 15 minutes, it will automatically power off.

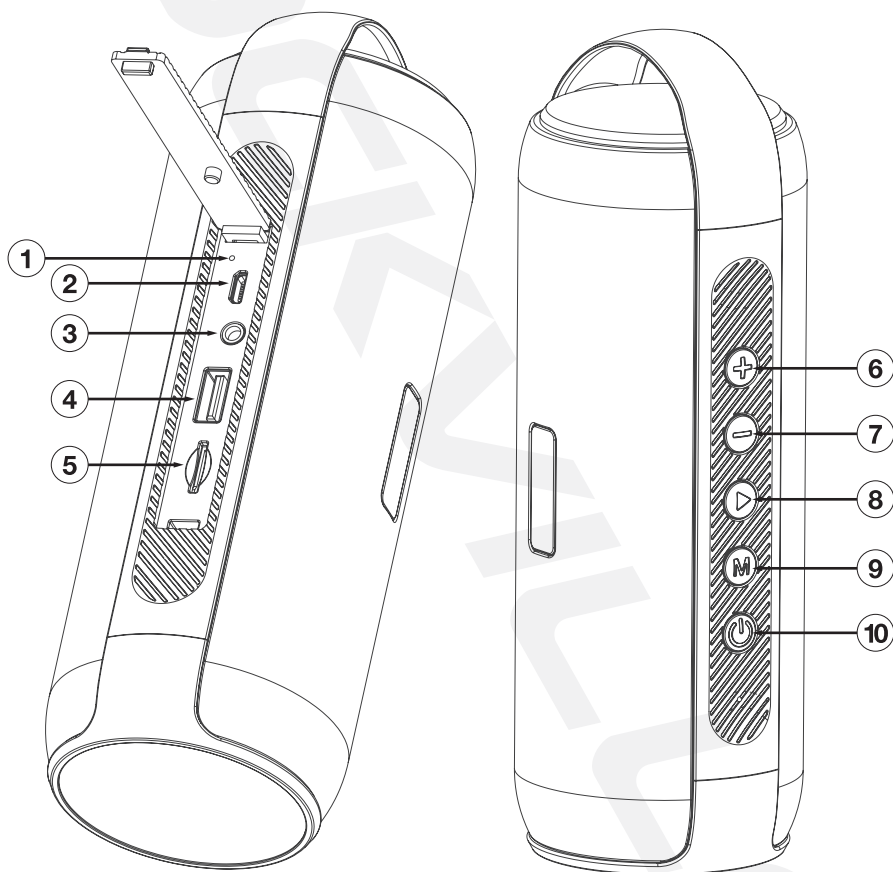

! ATTENTION: If you turn the unit off and then on again, it will remember the last volume setting.

Bluetooth Pairing

1. Ensure your device is in Bluetooth mode and discoverable.
2. Under list of available devices search for RPB25.
3. Select RPB25.

! ATTENTION: WHEN PAIRING YOUR BLUETOOTH DEVICE, PLEASE MAKE SURE THE VOLUME ON THE DEVICE IS TURNED UP.

Bluetooth Music

Press the -/+ buttons on the side of the unit to raise or lower the volume..
Press and hold -/+ buttons for 5 seconds to navigate through tracks.

Bluetooth Hands-Free

1. To answer a call press the PLAY button.
2. Press the PLAY button for 5 seconds to end a call.
3. Double click the PLAY button to dial last called number.

True Wireless Stereo (TWS)

1. Turn both speakers on.
2. While in Bluetooth mode, double click the power button on one of the speakers. This will be the primary speaker. You will hear a prompt tone when the unit enters pairing mode. Upon succesful pairing, you will hear a second prompt tone.
3. Search for and select RPB25 on your device's list of available Bluetooth devices. Both speakers will automatically connect to your device. The primary speaker will control all play back functions.

USB/SD Mode

1. Insert Micro SD card or USB flash drive (up to 32Gb supported) into the corresponding port at the rear of the unit.
2. Micro SD card/USB input should be automatically recognized and music will begin to play.
3. Press the -/+ buttons on the side of the unit to raise or lower the volume..
Press and hold -/+ buttons for 5 seconds to navigate through tracks.

Aux Mode

1. Upon plugging in a 3.5mm jack, the unit will automatically switch to that AUX input regardless of current mode. To switch back to previous mode, use the MODE button.
2. Press the -/+ buttons for to raise or lower the volume.

FM Radio

1. Connect the micro USB cable which doubles as an antenna.
2. Press the MODE button to enter into FM mode.

3. Press the PLAY button for 5 seconds to search for available stations.
4. Once the search is completed, it will automatically play the first found station.
5. Use the + and - keys to browse and select stations.



ATTENTION: If you turn the unit off and then on again, it will remember the last volume setting.

Control Lock Function

1. Press the MODE button for 5 seconds to lock the control buttons.
2. Press the MODE button again for 5 seconds to unlock the control buttons.

Charging

1. Plug the included micro USB cable into the port marked DC5V.
2. Charge time is 2.5 hours.
3. If the unit is inactive for 15 minutes, it will automatically power off.

Features and Specifications

- Rockville RPB25 multi-purpose portable rechargeable Bluetooth speaker system with TWS Stereo Linking
- 40W Peak Power / 15W RMS Power
- 360-degree sound dispersion technology
- True Wireless Stereo linking (TWS)
- Rechargeable 2000mAh/3.7V battery supports 10 hours of playback at 70% volume
- Charge time: 2.5 Hours
- Dual 2" long excursion drivers built-in
- Bluetooth version 5.0 with EDR (enhanced data rate)
- Bluetooth quick-connect technology pairs with your phone in 5 seconds
- A2DP audio streaming with 32 foot max Bluetooth range
- Automatically remembers and syncs with previously synched devices
- Playback Controls - Play, Pause, Skip Forward, Skip Back, Volume Up, Volume Down
- Will control next song, pause, play on popular apps like Pandora, Spotify, Youtube, and others
- The built-in mic allows you to speak through the device so you can make and receive phone calls hands-free
- Compatible with any Bluetooth devices such as iPad, iPhone, Laptops, Android phone, other cell phones, iPods, other Bluetooth MP3 Players
- Material: ABS, Rubber + metal grille
- Power Input: DC5V/500mA
- Plays back SD cards up to 32 GB
- Plays USB thumb drives up to 32GB
- 3.5mm aux input (aux cable included)

- Built in FM radio with auto scan
- Handle enables you to carry the speaker easily
- No distortion can be heard even at top volume
- Distortion: Less than 1%
- Professional voice conformations
- Frequency Response: 150HZ – 20KHZ
- Signal to noise ratio: 85dB
- Unit dimensions in inches: 2.76" L x 2.68" W x 7.76" H
- Unit Weight: 0.84 LBS

Troubleshooting

PROBLEM	SOLUTION
No Power	1. Make sure the unit is on. 2. Make sure the unit is charged. See page 5 for charging instructions.
Bluetooth/TWS pairing fails	1. Check to see that both devices are turned on and that your Bluetooth device is discoverable. 2. Make sure you've selected the proper source. 3. Make sure that the Bluetooth device is within 5 feet of the unit. 4. Check the speaker and input source volume settings. 5. Move both devices away from other Bluetooth devices, micro-waves, wireless routers, and other electronics. 6. Make sure that the unit is not paired to a previously paired device. See the Bluetooth and TWS instructions on page 4.
No USB/SD playback	1. Make sure you've selected the proper source. 2. Check that the SD card or USB flash drive is not damaged. 3. Make sure that the SD card's or USB flash drive's capacity is no more than 32Gb.

FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION

Responsible party name: Rockville

Address: 600 Bayview Ave,
Entrance A,
Inwood, NY 11096


Hereby declares that the product Rockville RPB25 portable Bluetooth speaker complies with FCC rules as mentioned in the following paragraph:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ROCKVILLE

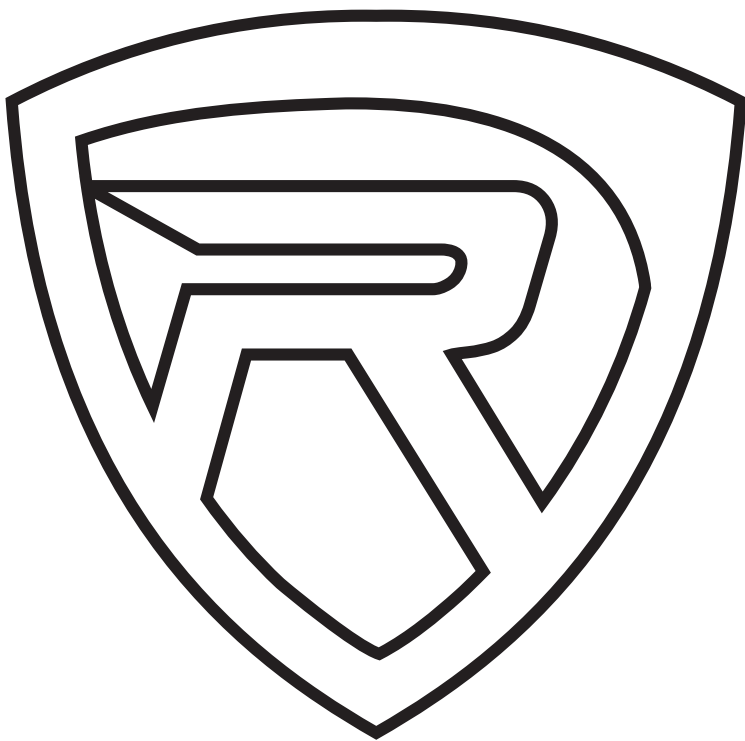

RockvilleAudio.com

© 2020 ROCKVILLE // Features and specifications are subject to change and or improvement without notice.