


ROCKVILLE

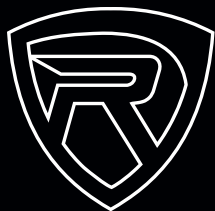


WIRING GUIDE

RTB-A Series
HIGH POWER VENTED TUBULAR ENCLOSURE


RTB65A FEATURES

1. Power connections. See wiring diagram for proper set up.
2. High Level input / output.*
3. RCA inputs. Connect directly to your head unit's RCA outputs.
4. 3.5mm Jack for MP3 input.
5. MP3 Volume control knob.
6. Low Pass Crossover control.
7. Full Range / Bass selector switch.
8. Power/Protect LED indicators.

*See High Level Input instructions at the back of the manual.

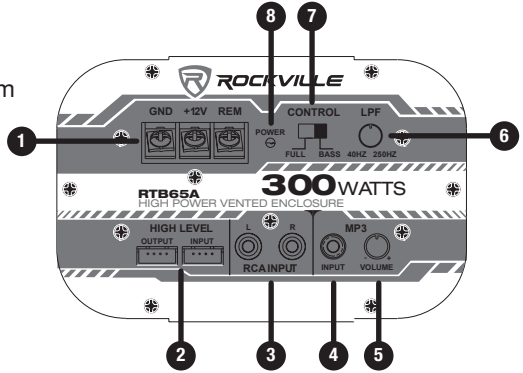


WIRING

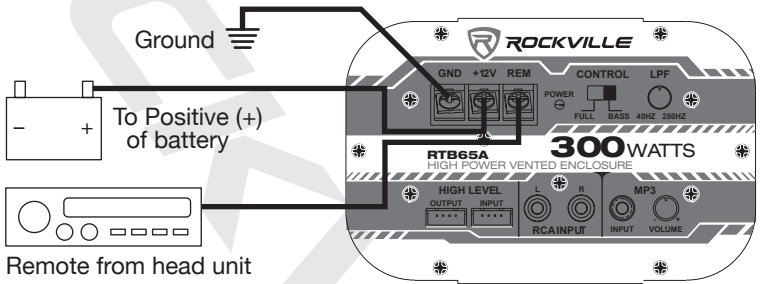

HIGH LEVEL INPUT

High Level inputs, also referred to as speaker level inputs, allow you to connect your system when you do not have an available RCA output on your receiver such as with most stock head units.

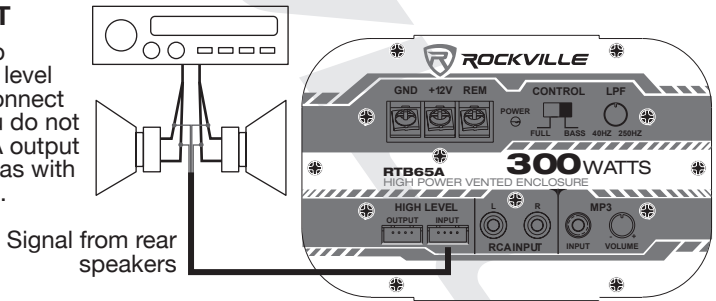


RCA/MP3 INPUT

From any device with a 3.5mm output



From head unit
RCA output

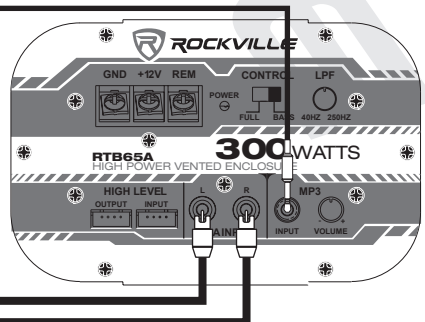


Use either High Level inputs, RCA input, or 3.5mm input.
NEVER USE ALL THREE.


RTB80A FEATURES

1. Power connections. See wiring diagram for proper set up.
2. High Level input / output.*
3. RCA inputs. Connect directly to your head unit's RCA outputs.
4. 3.5mm Jack for MP3 input.
5. MP3 Volume control knob.
6. Low Pass Crossover control.
7. Full Range / Bass selector switch.
8. Power/Protect LED indicators.

*See High Level Input instructions at the back of the manual.

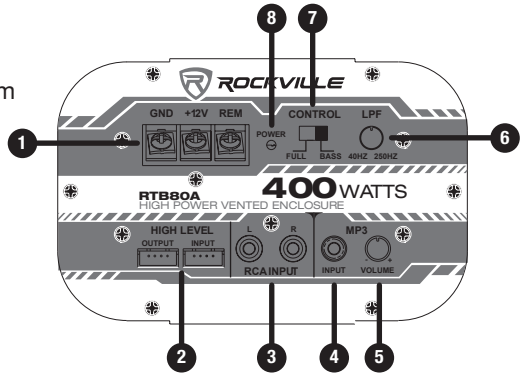


WIRING

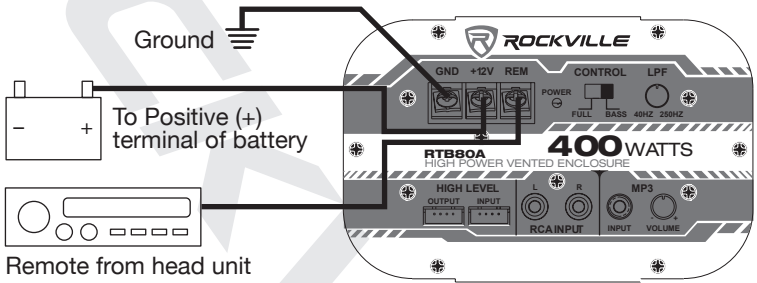


HIGH LEVEL INPUT

High Level inputs, also referred to as speaker level inputs, allow you to connect your system when you do not have an available RCA output on your receiver such as with most stock head units.

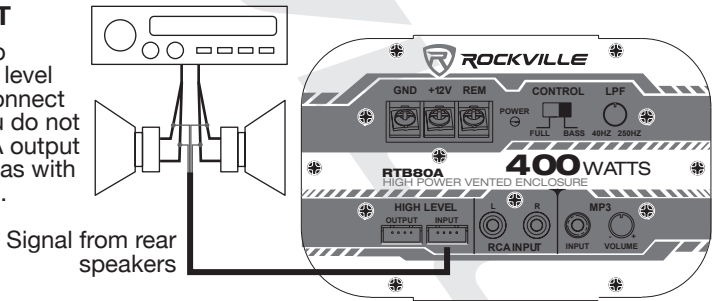

RCA/MP3 INPUT

From any device with a 3.5mm output

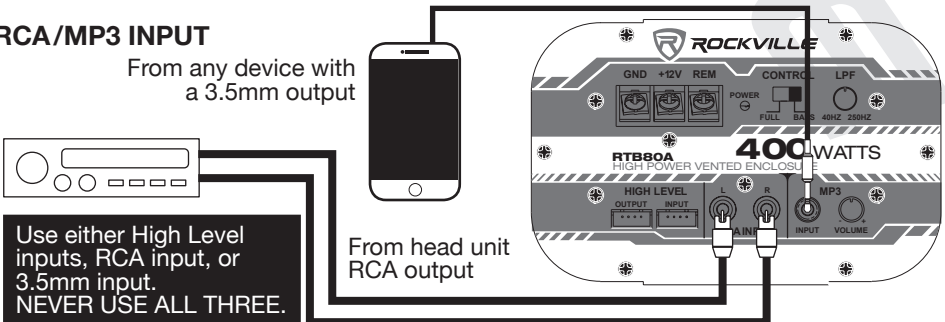


Use either High Level inputs, RCA input, or 3.5mm input.
NEVER USE ALL THREE.

From head unit
RCA output


RTB10A FEATURES

1. High Level input.*
2. Bass Remote. Connect dash mounted bass remote (included) via RJ45 cable (included).
3. RCA inputs. Connect directly to your head unit's RCA outputs.
4. Gain control. The gain control regulates the volume input to the pre-amp stage.
5. Low Pass Crossover control. The gain control regulates the volume input to the pre-amp stage.
6. Adjustable Bass control.
7. Power/Protect LED indicators.
8. Power connections. See wiring diagram for proper set up.
9. Fuse.

*See High Level Input instructions at the back of the manual.

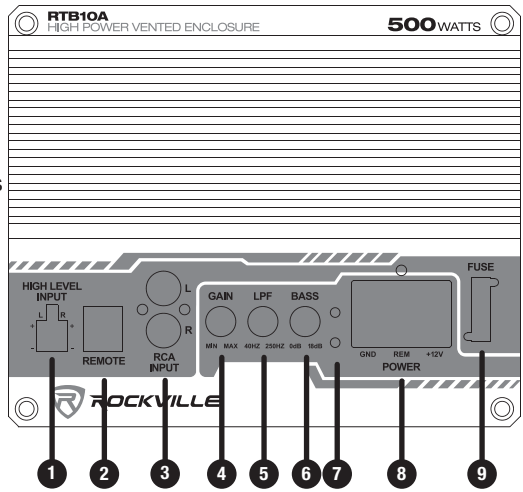


WIRING

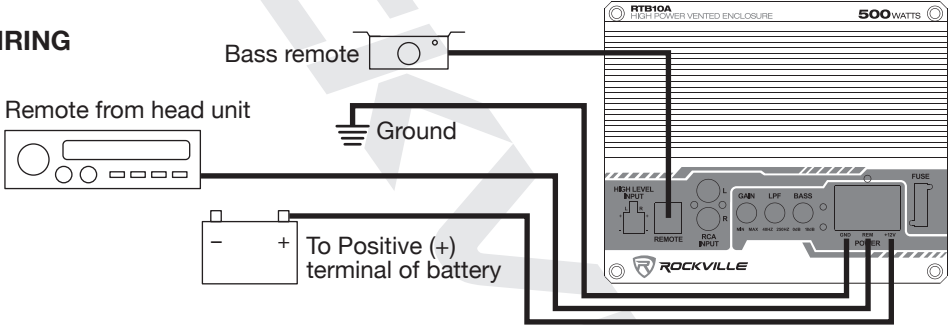


HIGH LEVEL INPUT

High Level inputs, also referred to as speaker level inputs, allow you to connect your system when you do not have an available RCA output on your receiver such as with most stock head units.

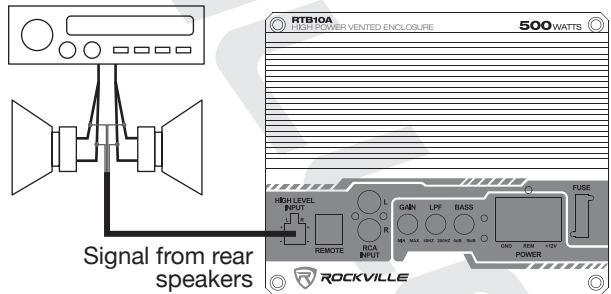


RCA INPUT

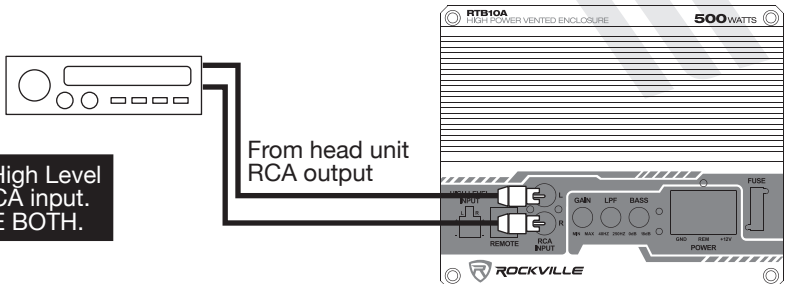


Use either High Level inputs or RCA input.
NEVER USE BOTH.

RTB12A FEATURES

1. High Level input.*
 2. Bass Remote. Connect dash mounted bass remote (included) via RJ45 cable (included).
 3. RCA inputs. Connect directly to your head unit's RCA outputs.
 4. Gain control. The gain control regulates the volume input to the pre-amp stage.
 5. Low Pass Crossover control.
 6. Adjustable Bass control.
 7. Power/Protect LED indicators.
 8. Power connections. See wiring diagram for proper set up.
 9. Fuse.
- *See High Level Input instructions at the back of the manual.

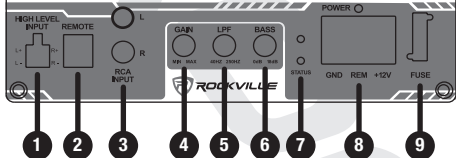


WIRING

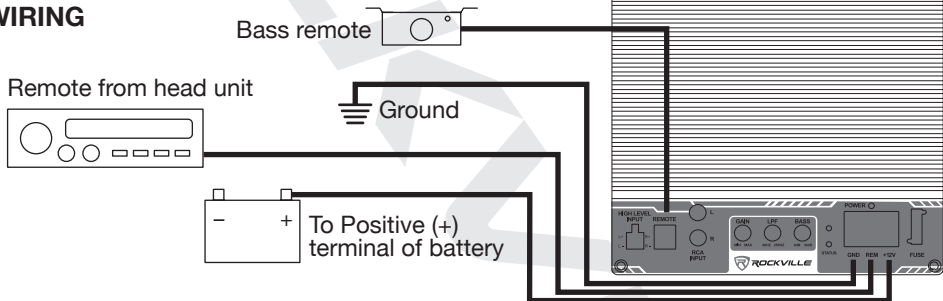

HIGH LEVEL INPUT


High Level inputs, also referred to as speaker level inputs, allow you to connect your system when you do not have an available RCA output on your receiver such as with most stock head units.

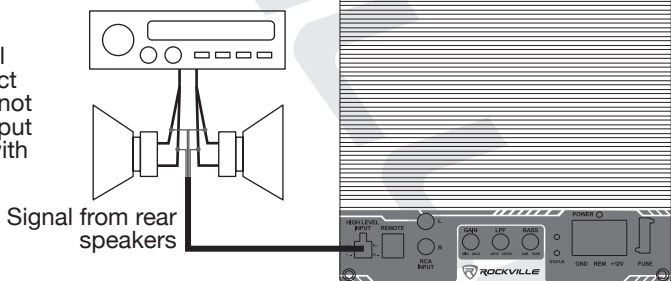

RCA INPUT

Use either High Level inputs or RCA input.
NEVER USE BOTH.

From head unit
RCA output

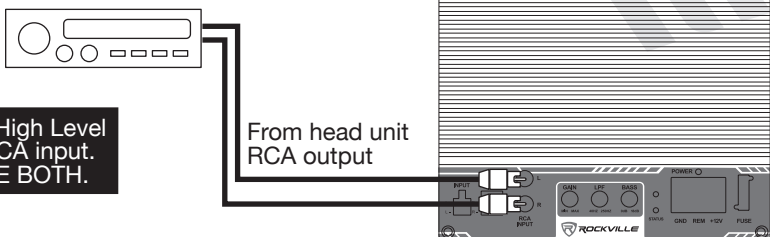

Features

- High Power Woofer in Vented Tubular Enclosure
- Rear Aero Vent Bass System
- Integrated, Built-in RMS CEA Rated Amplifier
- Speaker Level and RCA Line-Level Input
- Adjustable Bass Crossover
- Adjustable Dashboard Bass Remote Control (RTB10A & RTB12A only)
- Molded Steel Woofer Grills
- Four Steel Mounting Brackets + Two Canvas Straps with Velcro Fasteners
- Durable Aviation Grade Tweed Carpet
- Custom Embroidery

RTB12A Specifications

- Power: 300 Watts RMS, 600 Watts Peak
- Frequency Response: 30Hz - 200Hz
- Sensitivity: 111dB
- Height: 12.75" (323.85mm), Length: 22.83" (529.84mm)



RTB10A Specifications

- Power: 250 Watts RMS, 500 Watts Peak
- Frequency Response: 30Hz - 200Hz
- Sensitivity: 108dB
- Height: 10.75" (273.5mm), Length: 20.86" (529.84mm)



RTB80A Specifications

- Power: 200 Watts RMS, 400 Watts Peak
- Frequency Response: 30Hz - 200Hz
- Sensitivity: 105dB
- Height: 8.75" (202.25mm), Length: 19" (482.6mm)




RTB65A Specifications

- Power: 150 Watts RMS, 300 Watts Peak
- Frequency Response: 30Hz - 200Hz
- Sensitivity: 102dB
- Diameter: 7.25" (184.15mm), Length: 15.75" (400.5mm)



High Level Input / Output Connections RTB65A & RTB80A

Patch the cables from the High Level input harness to the corresponding L/R Pos/Neg wires from your rear speakers. If using the High Level output harness, connect the wires directly to the speakers.

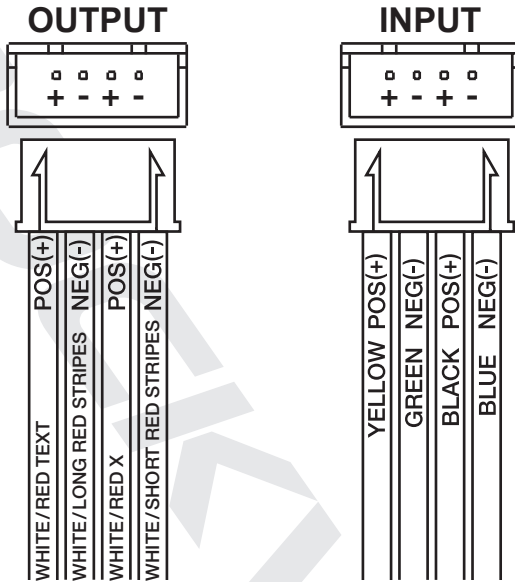


High Level Input RTB10A & RTB12A

Patch the cables from the High Level input harness to the corresponding L/R Pos/Neg wires from your rear speakers.

Troubleshooting

PROBLEM	SOLUTION
No power	<ol style="list-style-type: none"> 1. Check ground, power, and remote connections. 2. Check fuse 3. Check head unit (remote voltage)
No Sound	<ol style="list-style-type: none"> 1. Check all input connections (RCAs/high level inputs). 2. Check ground, power, and remote connections. 3. Check head unit (settings/connections).
Output sounds distorted	<ol style="list-style-type: none"> 1. Check gain settings 2. Check bass boost settings 3. Check head unit (settings/connections).

ROCKVILLE

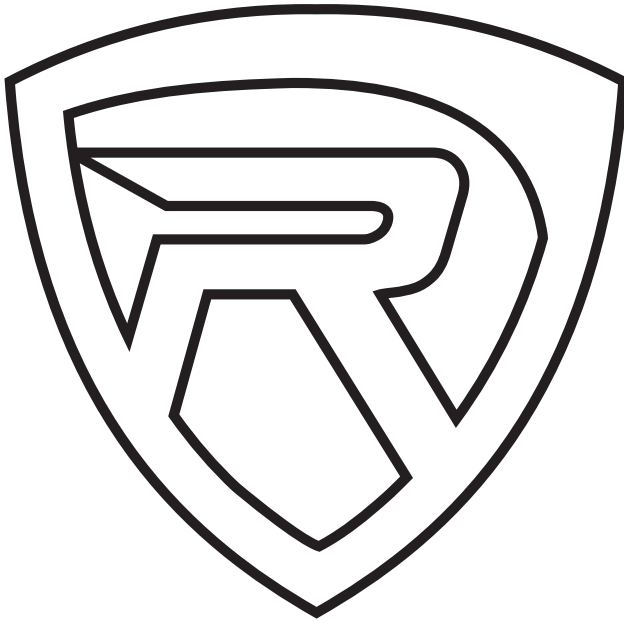

RockvilleAudio.com