

ROCKVILLE

RVE12CA WIRING GUIDE

FEATURES

- 1. High Level Input: High Level inputs, also referred to as speaker level inputs, allow you to connect to the factory speaker wires. They are called High Level inputs because they convert the high voltage running through factory speaker wires to one the amplifier can handle. These inputs will provide the end user with clean, well defined sound for optimal musical enjoyment.
- 2. Bass Remote: Connect dashmounted bass remote (included) via RJ11 cable (included).
- 3. RCA Input: Connect directly to your head unit's RCA ouputs.
- 4. Gain Control: The gain control regulates the volume input to the pre-amp stage.
- 5. Low Pass Crossover control: Adjust Low Pass frequency from 40Hz - 250Hz.
- 6. Power/Protect LED indicators.
- 7. Power Connections: See WIRING /BASS REMOTE diagram for proper set up.
- 8. Fuse.

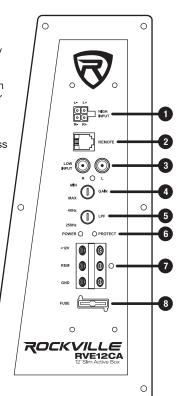

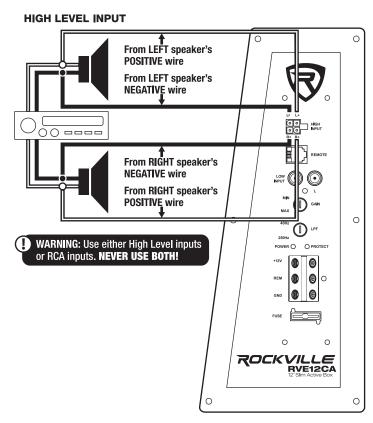


WIRING / BASS REMOTE ATTENTION: The ground wire should be 8 gauge or heavier. Ensure that there is no paint or other insulator at the point of contact on the chassis. **Bass Remote** From POSITIVE (+) 0 battery terminal to the POSITIVE POWER () () PROTECT (+12V) terminal. 0 **0** 0 From the HEAD UNIT's From the VEHICLE's

CHASSIS to the

GROUND (GND)

terminal.

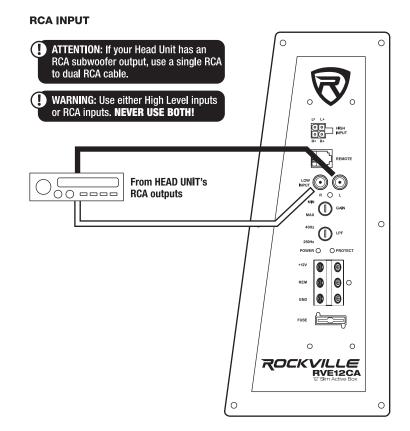

RockvilleAudio.com

remote turn-on wire or

lead to the REMOTE

START (REM) terminal.

the VEHICLE's accessory

0

ROCKVILL