

OWNER'S GUIDE

System Setup

1. Load batteries into the mic and the receiver. Each unit uses two 1.5v AA batteries.
2. Turn on the mic and the receiver. The receiver RF indicator LED will turn on when the mic is connected.
3. If the power indicator LED becomes dim or if the reception distance is reduced, please replace the battery.

How to Change Receiver Channel

1. Once the receiver is powered up, it will display the current frequency channel. After a few seconds, the display will automatically turn off to conserve battery life. If the display shows "LB" and is flashing, the battery is low and must be replaced.
2. To change the channel, press and hold both the up arrow and down arrow button together for a few seconds. When the display begins to flash use the up arrow or down arrow buttons to select a different frequency channel. If you do not make a selection within a few seconds, the display will stop blinking and the unit will exit the current mode.

Matching the Transmitter with Receiver using IR

Place the mic power switch to the middle position. Now point the mic IR transmitter at the receiver IR LED. Be sure that the mic and receiver are less than 10 inches from each other. Now press and hold the up arrow button for a few seconds. The receiver display will show "SD" and the mic LED light will blink repeatedly. This indicates that the mic has successfully linked with the receiver. Now place the mic power button in the ON position to resume normal use.