

ROCKVILLE

ROCK LAUNCHER

WATERPROOF PORTABLE
BLUETOOTH SPEAKER w/TWS

OWNER'S MANUAL

ATTENTION:

VISIT THE ROCKVILLE SUPPORT SITE FIRST!

Who reads manuals?

Scan the **QR code** or go to the **URLs** to access how-to video(s), the owner's manual, and other important information you may need to get the most out of your item.

**If you prefer written instructions,
please read ahead!**

With Rockville you get many options.



rockvillesupport.com/
rock-launcher-bk



rockvillesupport.com/
rock-launcher-gr



rockvillesupport.com/
rock-launcher-sl

Missing items? If you ordered a bundle that includes more than one product and you are missing part of your bundle, then it just means your order shipped from two different warehouses. You will receive the remaining items very soon. If you have any concerns or inquiries, feel free to call our customer support center at 1-646-758-0144, 24 hours a day/5days a week. We are closed from Friday 5:00pm to Sunday 9:00am EST.



Please read this guide carefully for proper use of your Rockville ROCK LAUNCHER Bluetooth speaker. Should you need assistance, please call our technical help line at 1-646-758-0144, 24 hours a day/5 days a week. We are closed from Friday 5:00pm to Sunday 9:00am EST.

INCLUDES

- Bluetooth speaker
- Micro USB charging cable
- 3.5mm to 3.5mm aux cable
- Manual
- Warranty card

FUNCTIONS

1. Mic
2. Play/Pause and Answer/End call
3. Volume +/Next
4. Volume -/Previous
5. Power On/Off and Mode Indicator LED
6. 3.5mm AUX in
7. Micro USB charging port

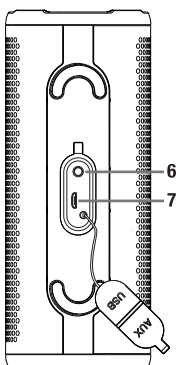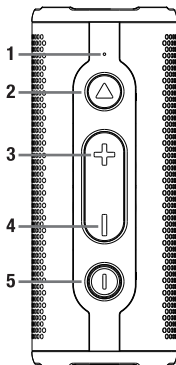

OPERATION

Power ON: Hold down the Power button for 3 seconds. The unit will automatically enter into Bluetooth pairing mode.

Bluetooth

1st Time Pairing: Power ON the unit. The blue mode indicator LED will flash quickly. Now look for and select ROCK LAUNCHER on your Bluetooth device's list of available devices. If pairing is successful, the blue mode indicator LED will blink slowly.

Unpairing: To unpair current device and return to pairing mode, press and hold Play/Pause. The blue mode indicator LED will flash quickly indicating that the unit is in pairing mode.

Automatic Pairing: The ROCK LAUNCHER unit will remember and automatically pair with previously paired devices.

True Wireless Stereo (TWS)

If you have a pair of ROCK LAUNCHER speakers, you can set them up as a 2.0 stereo speaker system. Please make sure the units are no more than 16ft away from each other during pairing.

TWS Pairing: 1. Hold the Power button down on the first speaker for 3 seconds. Then hold the Play button down for 3 seconds to enter into Stereo Pairing mode. At this time the blue mode indicator LED will blink quickly. If the speaker is already paired with a Bluetooth device, hold down the Play/Pause button to disconnect the speaker from the current device and return it to pairing mode.

2. Hold down the Power button on the second speaker for 3 seconds. The speaker will automatically search for the first speaker and then connect with it. Once it has successfully connected, the blue mode indicator LED on the second speaker will blink steadily.

3. Now look for and select ROCK LAUNCHER on your Bluetooth device's list of available devices. If pairing is successful, the blue mode indicator LED of the first speaker unit will blink slowly.

TWS Unpairing: Hold down the Play/Pause button for 3 seconds to exit TWS mode.

Automatic Pairing: Once TWS pairing has been achieved, the ROCK LAUNCHER unit will remember previously paired devices and automatically go into TWS mode.

Playback Controls

Once paired, all playback functions (play/pause, volume, tracks) can be controlled from your playback source (ex. phone/mp3 player) without ever having to touch the unit. You can also control playback from the ROCK LAUNCHER. Please note, if you are using an iPhone, iPad, or iPod the volume controls are synched so that if you raise the volume on your device, it will raise the volume on the unit and vice versa. If using an Android device, you will need to adjust the device's volume and the ROCK LAUNCHER's volume independently.

Music: Press the Play/Pause button to begin or pause music playback.

Volume Control: Press the + button to increase the volume or press the - button to decrease the volume.

Skip Songs: Hold down the + button for the next song. Hold down the - button for the previous song.

Answering/Ending Calls: Press the Play/Pause button to answer incoming calls. Press the Play/Pause button to end the conversation. To reject an incoming call hold down the Play/Pause button.

Auxiliary

Use the included 3.5mm to 3.5mm cable to connect non Bluetooth external audio devices. The unit will automatically switch to auxiliary mode and the mode indicator LED will steadily blink red.

Music Playback/Skip Songs: Use your device to control Play/Pause and skip track functions

Volume Control: You will need to adjust the device's volume and the ROCK LAUNCHER's volume independently.

Charging

Connect the included micro USB cable to the micro USB port at the rear of the unit. Connect the other end to an AC adapter (not included) or a computer USB port. Normal full charge time is 3 – 4 hours. The mode indicator LED will remain solid green while charging and will turn off once the unit is fully charged. If the

speaker is powered on and is inactive for more than 10 minutes, it will automatically shut off.

TROUBLESHOOTING

No Power	<ul style="list-style-type: none">• Make sure the battery is fully charged.• If not, plug the unit to a USB power source and charge for 3 – 4 hours for a full charge.
Bluetooth pairing fails	<ul style="list-style-type: none">• Make sure both devices are turned on and that your BT device is discoverable.• Make sure you've selected the proper source.• Make sure the BT device is within 5ft of the unit.• Move both devices away from other BT devices, microwaves, wireless routers, and other electronics.• Make sure the unit is not paired to another device.
TWS pairing fails	<ul style="list-style-type: none">• Make sure both devices are disconnected from any previously paired devices.• Turn-on the first unit and follow the TWS pairing steps.• Make sure the speakers are no more than 16ft apart during the pairing process.

FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION

Responsible party name: Rockville

Address: 600 Bayview Ave,
Entrance A,
Inwood, NY 11096

Hereby declares that the product Rockville ROCK LAUNCHER portable Bluetooth speaker complies with FCC rules as mentioned in the following paragraph:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

RockvilleAudio.com

© 2022 ROCKVILLE // Features and specifications are subject to change and/or improvement without notice.