 


ROCKVILLE

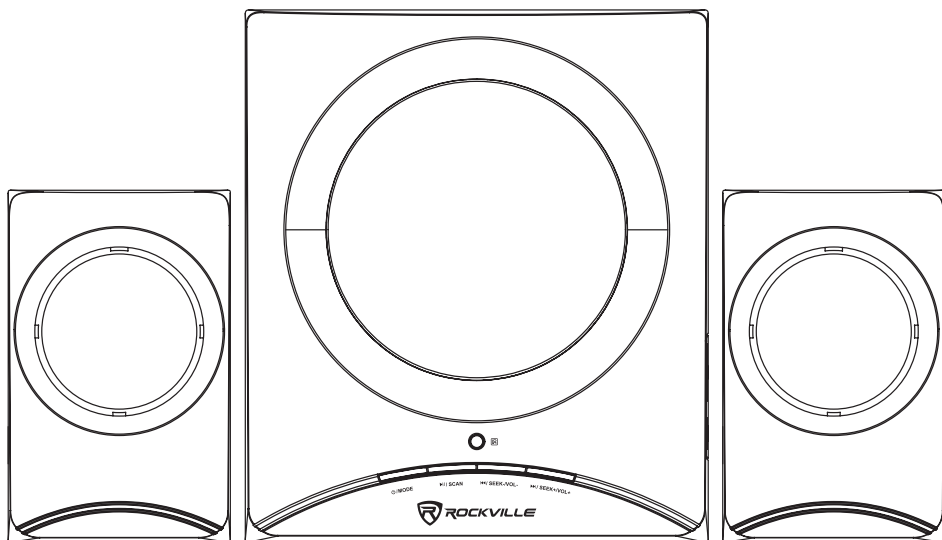

OWNER'S MANUAL

ROCKMEDIA

100W 2.1 CHANNEL HOME/COMPUTER SPEAKER SYSTEM

Who reads manuals?

Instead, go to vimeo.com/494528256
or scan the QR code and watch a
short video, which shows you how to
set this item up and how to use it.



רשת
רוכב

Thank you for purchasing the Rockville ROCKMEDIA Home/Computer Speaker System. It is a full featured home audio system and is perfect as computer speakers, bedroom speakers, and bookshelf speakers. Please read this guide carefully for proper use of your Rockville Home/Computer Speaker System. Should you need assistance please call our technical help line at 1-646-758-0144, Monday through Thursday, 9am to 10pm EST, and Friday 9am to 3pm EST.

INCLUDES

- (2) Speakers
- (1) Subwoofer
- Remote control (Battery included)
- 3.5MM to dual RCA
- User manual
- Warranty card

 
IMPORTANT SAFETY INSTRUCTIONS




TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE AMPLIFIER PLATE. NO USER SERVICEABLE PARTS INSIDE. WE RECOMMEND TAKING THE UNIT TO A QUALIFIED SERVICE TECHNICIAN FOR ANY REPAIRS.

- Do not place these speakers on an unstable cart, stand, bracket or table. The monitor may fall, causing serious injury to a child and serious damage to the unit.
- Do not use these speakers near water; for example, near a bathtub, sink, in a wet basement, or near a swimming pool.
- The speakers should be situated away from heat sources such as radiators, heat registers, stoves, or other devices that produce heat.
- These speakers should be connected to a power supply outlet of the same voltage as that which is specified on the amp plate of the unit. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it exits from the unit.
- Clean only with a soft damp cloth. Unplug this product from the wall outlet before cleaning.
- Upon completion of any servicing or repairs, request the service center/shop uses factory authorized replacement parts. Replacement with unauthorized parts may result in fire, electrical shock, or other hazards.


FUNCTIONS

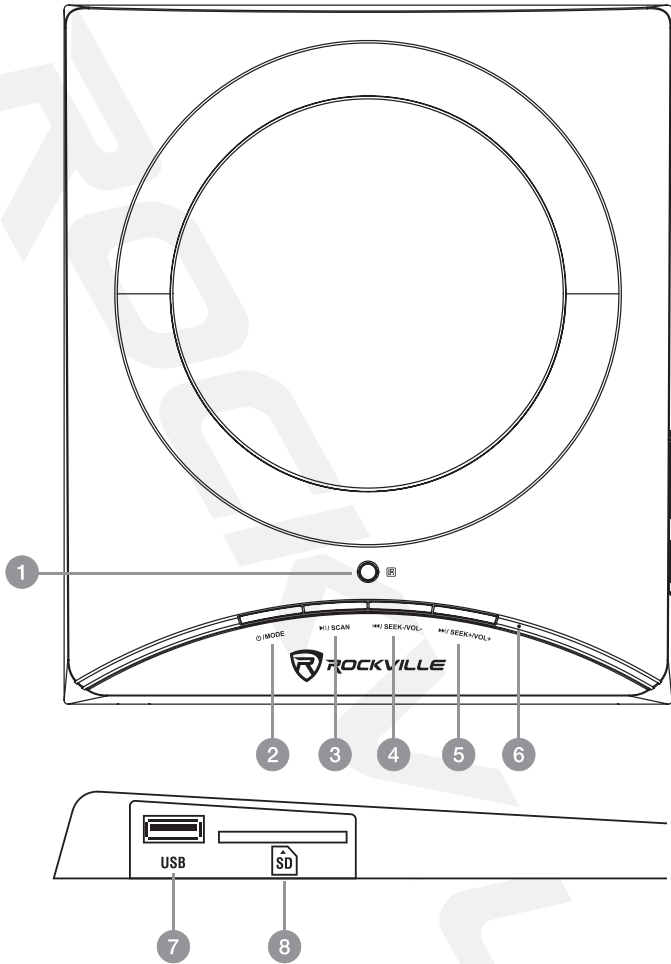

- 1. Remote control sensor.
- 2. Stand-by/Mode: Long press to turn-on. Short press to switch between modes (USB, SD, AUX, FM, and Bluetooth).
- 3. Play/Pause/Scan: Short press to Play/Pause playback in USB/SD/Bluetooth mode. In FM mode long press to auto scan and save available FM stations.
- 4. Previous/Seek/Volume-: Short press to decrease volume, long press to select previous track in USB/SD/Bluetooth modes or to select previous station in FM mode.
- 5. Next/Seek/Volume+: Short press to increase volume, long press to select next track in USB/SD/Bluetooth modes or to select next station in FM mode.
- 6. Status indicator LED.
- 7. USB flash drive port
- 8. SD card slot

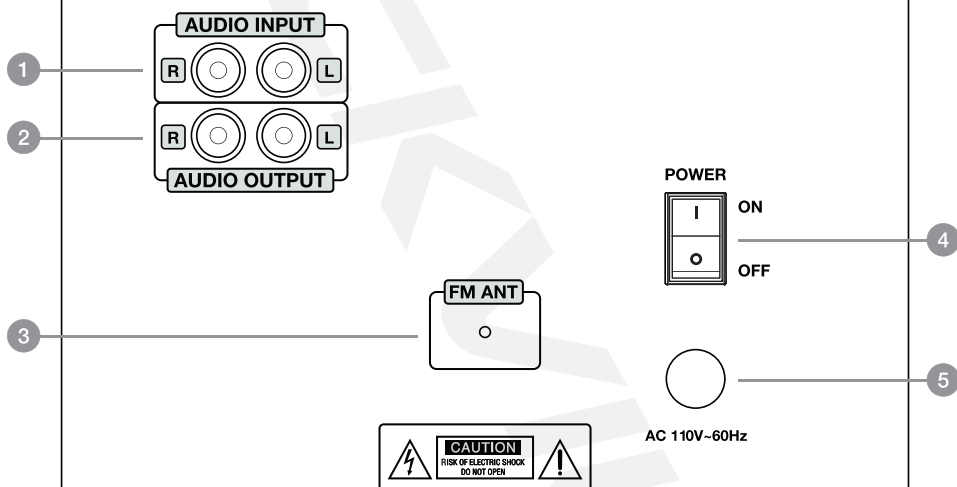 

 1. RCA Audio Input: Connect any external sound source such as PC, laptop, MP3 player, iPod, DVD player, stereo receiver, etc.
2. RCA Audio Output: sends sound signal to left and right speakers.
3. FM Antenna: connect FM antenna for clear FM reception.
4. Power ON/OFF
5. AC In power cord.

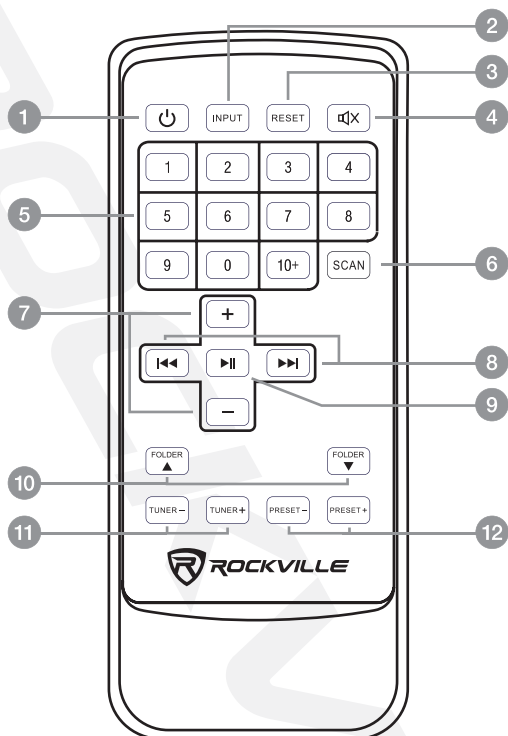

1. Stand-by: press to turn-on, press again to enter stand-by mode.
2. Input: press to switch between modes (USB, SD, AUX, FM, and Bluetooth).
3. Reset: resets the volume of the system to default level.
4. Mute
5. Number pad: use 0 – 9 to select desired track in USB/SD/Bluetooth modes, use to select radio frequency in FM mode. Use +10 to scan frequencies or select tracks in intervals of 10.
6. Scan: scans and autosaves available FM stations.
7. Vol+/Vol-: adjusts volume level of the speaker.
8. Previous/Next: select previous and next track in USB/SD/Bluetooth modes.
9. Play/Pause: press to Play/Pause playback in USB/SD/Bluetooth mode.
10. Folder Up/Down: navigate folders in USB/SD modes.
11. Tuner-/Tuner+: short press to select next/previous FM frequency, long press to get next/previous available FM channel.
12. Preset-/Preset+: navigate previous/next FM preset stations.

BLUETOOTH

1. Press MODE button on the subwoofer unit or INPUT button on the remote until Bluetooth mode is enabled.
2. The unit will automatically enter pairing mode and the status indicator LED be blue and blink intermittently.
3. Turn on the Bluetooth feature on your device and ensure that it is discoverable.
4. Select the name "ROCKMEDIA" in your device's list of available devices.
5. Once paired, music can be controlled via the speaker unit or via the remote.
6. The unit will automatically connect with last paired device.

FM

1. Press MODE button on the subwoofer unit or INPUT button on the remote until FM mode is enabled.
2. To Autoscans: On the subwoofer unit long press Play/Pause button to scan and save FM stations. You can also press the scan button on the remote control.
3. To manually scan stations: Short press the Tuner +/- button to select next/previous FM frequency; long press the Tuner +/- button to get to the next/previous available FM station.
4. To directly select FM frequencies: Press the desired numeric key combination to select desired FM station. Example: If you wish to play 94.5 FM, press 945.
5. Use the Preset +/- buttons on the remote to navigate saved stations.
6. Connect the provided antenna to the antenna jack at the rear of the subwoofer unit to get clear FM reception.

USB/SD

1. Insert USB drive or SD card.
2. Power on the unit.
3. USB drive or SD card content will play automatically.
4. The unit will automatically play USB/SD content automatically if either is inserted while the unit is in any other mode (FM/AUX/BT).

AUX

1. Press MODE button on the subwoofer unit or INPUT button on the remote until AUX mode is enabled.
2. Plug external sound source into the RCA input jacks on the rear of the subwoofer unit.

Status Indicator LED Key

- Stand-by: slowly blinks red
- AUX: constant red
- USB/SD: constant red
- Pairing mode: fast blinking blue
- Paired mode: constant blue
- FM: constant purple
- Mute: blinks red and blue simultaneously
- Pause: slowly blinks blue

FEATURES

- Rockville ROCKMEDIA 100 Watts 2.1 Channel Speaker System
- 4.5" Subwoofer plays mid and bass frequencies (Ported enclosure for punchy bass)
- (2) 3" speakers for high frequencies (acoustically tuned for best sound quality)
- Complete home media audio system
- Built in top quality Bluetooth technology with enhanced data rate and 33 feet range
- Built in USB input to play back songs stored on a thumb drive (up to 32GB)
- Built in SD memory card slot allows playback of audio stored on a memory card (up to 32GB)
- Built in FM radio
- RCA Aux input allows easy connection of a laptop, computer, TV, phone, tablet, or any other audio device
- 100 Watts peak output/40 Watts continuous RMS (real true world power ratings; do not be fooled by products that write 500 or 1000 watts our product has more power and better sound)
- Fully wooden enclosure for pure audiophile sound quality
- Beautiful designer grade wood enclosure with gold finish looks great in any room or office
- Convenient key controls on front panel
- Full function remote control
- Frequency response: 40Hz – 20KHz
- Channel Separation: $\geq 55\text{dB}$ (1KHz)
- 110V power supply
- Unit dimensions (inches): Sub: 7.88" width x 9.06" height x 9.06" depth
Sat: 3.75" width x 5.9" height x 3.55" depth
- Unit Weight: 9.04 LBS

TROUBLESHOOTING

PROBLEM	SOLUTION
No power	<ol style="list-style-type: none">1. Make sure the unit is plugged in and the power switch is in the ON position.2. Make sure the unit is not in Standby mode.
No sound	<ol style="list-style-type: none">1. Make sure you've selected the proper source.2. For all audio modes make sure that the volume control is set properly.3. For Bluetooth/aux modes make sure that the source volume control is properly adjusted.
Bluetooth pairing fails	<ol style="list-style-type: none">1. Check to see that both devices are turned on and that your Bluetooth device is discoverable.2. Turn both devices off and then on again.3. Make sure you've selected the proper source.4. Make sure that the Bluetooth device is within 5 feet of the unit.5. Move both devices away from other Bluetooth devices, microwaves, wireless routers, and other electronics.6. Make sure that the unit is not paired to a previously paired device.
Files on USB/SD memory device will not play back	<ol style="list-style-type: none">1. Make sure you've selected the proper source.2. Make sure that the audio files are in the MP3 format.3. Ensure the USB drive/SD card does not exceed 32Gb.
Poor FM reception	<ol style="list-style-type: none">1. Ensure the FM station is properly tuned.2. Check that the FM antenna is connected and propely sitauted.

FEDERAL COMMUNICATIONS COMMISSION COMPLIANCE INFORMATION

Responsible party name: Rockville

Address: 600 Bayview Ave
Entrance A
Inwood, NY 11096

Hereby declares that the product(s) ROCKMEDIA Home/Computer Speaker System complies with FCC rules as mentioned in the following paragraph:

 
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Rockwell

ROCKVILLE

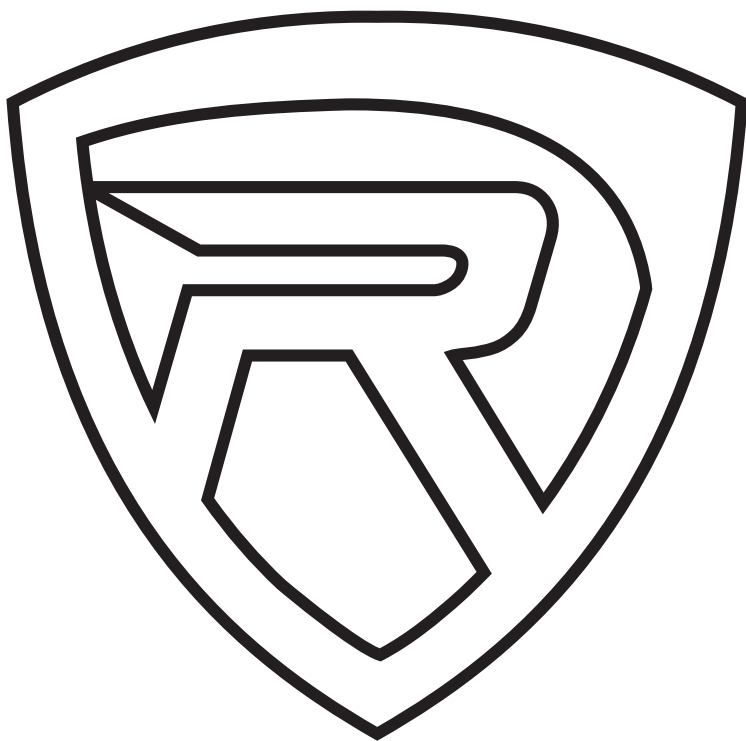

RockvilleAudio.com

© 2018 ROCKVILLE // Features and specifications are subject to change and or improvement without notice.