

# WET PAR PRO Operating Instructions

Thank you for purchasing this Rockville WET PAR PRO. Please read these operating instructions carefully. Should you need assistance, please call our technical help line at 1-646-758-0144, 24 hours a day/7 days a week.



rockvillesupport.com/  
wet-par-pro



rockvillesupport.com/  
wet-par-pro-white

## Settings

Press the MENU button repeatedly to cycle through modes. Use the UP and DOWN buttons to scroll through the options or numerical values for that setting. Press the ENTER button to save your selection. If you press the ENTER button on any setting, the saved mode/settings/values will remain in place even after powering off the unit and will be the default when you power the unit back on.

Display Mode	Value	Description
A001	A001 – A512	DMX channel address
6Ch/10Ch	6Ch – 10Ch	Select 6 or 10 channel modes.
CL01	CL01 – CL32	Single color mode
CC09	CC01 – CC09	Automatically cycle through colors
EE09	EE01 – EE09	Color pulse
FF09	FF01 – FF09	Color fade
ST09	ST01 – ST09	Press the MODE button until the screen reads ST01. Press the ENTER button to toggle between ST (strobe speed) or Co (strobe color) to make adjustments as necessary.
Co01	Co01 – Co32	
SoU1	SoU1 – SoU4	Select sound control mode
		SoU1: Cycles through solid colors
		SoU2: Color pulse
		SoU3: Color strobe
		SoU4: Color change strobe + white strobe
IRCL	On/Off	Turn remote control function on or off. Press the ENTER button, then use the up/down buttons to toggle between on and off.
r000	r000 – r255	Red dimmer
g000	g000 – g255	Green dimmer
b000	b000 – b255	Blue dimmer
u000	u000 – u255	White dimmer
y000	y000 – y255	Yellow (amber) dimmer
P000	P000 – P255	Purple (UV) dimmer

## Remote Control Functions

- ⬆️/⬇️ (+/-, up/down): Adjust speed, and brightness depending on what mode the unit is set to.
- ON/OFF: Turns the LEDs on or off. Please note, this button is strictly for the LEDs. The unit will remain on. To turn it off, use the power switch on the unit.
- COLORS: Directly select red, green, blue, white, amber (yellow), or UV (purple) LED color. Press the COLOR WHEEL button (a) then use the ⬆️/⬇️ buttons to cycle through the 32 color presets.
- TRI COLOR WHEELS: Press to cycle through the three colors represented on each button. Once you've chosen a color, use the ⬆️/⬇️ buttons to adjust the brightness.
- SOUND: Use these buttons to select the desired sound mode (SoU1 – Sou4. See chart above).
- AUTO: Cycles through 32 colors. Use the ⬆️/⬇️ buttons to set the speed at which the unit will cycle through colors.
- STROBE: Sets the unit to strobe mode. First select the color, then press the STROBE button. Use the ⬆️/⬇️ buttons to set strobe speed.
- FADE: The unit will fade from one color to next. Use the ⬆️/⬇️ buttons to set the speed at which the unit will fade between colors.
- 6CH/10CH: Press to toggle between 6 channel and 10 channel modes.
- MASTER/SLAVE: Press the appropriate button to make the selected light the master or slave unit. Use the ⬆️/⬇️ buttons to adjust the DMX address.



## DMX Controller Functions

When using a DMX controller, use the charts below to reference each channel's function.

### 6-Channel Mode

Channel	Function	Value	Description
1	Red	0 – 255	Adjust individual color brightness
2	Green	0 – 255	
3	Blue	0 – 255	
4	White	0 – 255	
5	Yellow (amber)	0 – 255	
6	Purple (UV)	0 – 255	

### 10-Channel Mode

Channel	Function	Value	Description
1	Master dimmer	0 – 255	Adjust overall brightness (Channels 1 – 8)
2	Red	0 – 255	Adjust individual color brightness
3	Green	0 – 255	
4	Blue	0 – 255	
5	White	0 – 255	
6	Yellow (amber)	0 – 255	
7	Purple (UV)	0 – 255	
8	Strobe	0 – 10	
		11 – 255	Set strobe speed
9	Off	0 – 9	Adjust function settings
	Select color	10 – 50	
	Color change	51 – 100	
	Color fade	101 – 150	
	Pulse color change	151 – 200	
	Color changes to the beat	201 – 220	
	Color strobe changes to the beat	221 – 240	
Pulse color changes to the beat	241 – 255		
10	Ch9 speed/color options	0 – 255	Adjust Ch9 function speeds and single colors